

PTZ CAMERA

# ZC-PT SERIES

## USER MANUAL

EN

Thank you for your purchase of this product. Before operating the product, please read this instruction manual carefully to ensure proper use. Please store this instruction manual in a safe place for future reference, after you have read it.

**GAWZ**<sup>®</sup>



## Preface

The information provided in this manual was current when published. The company reserves the right to revise and improve its products. All specifications are subject to change without notice.

### Notice

To work with the PTZ Cameras, any installer or technician must have the following minimum qualifications:

- A basic knowledge of CCTV systems and components
- A basic knowledge of electrical wiring and low-voltage electrical connections
- Thorough familiarity with the contents of this manual

### Important Information

Before proceeding, please read and observe all instructions and warnings in this manual. Retain this manual with the original bill of sale for future reference and, if necessary, warranty service. When unpacking your unit, check for missing or damaged items. If any item is missing, or if damage is evident, DO NOT INSTALL OR OPERATE THIS PRODUCT. Contact your dealer for assistance.

### Copyright

Under copyright laws, the contents of this user manual may not be copied, photocopied, translated, reproduced or replicated in any electronic medium or machine-readable format, in whole or in part, without the prior written permission of CBC Co. Ltd.

©Copyright2006CBC Co. Ltd.

### Regulation



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



#### Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product

## Warning Notices

- **Handle the camera with care**  
Do not abuse the camera. Avoid striking, shaking, etc. The camera could be damaged by improper handling or storage.
- **Do not dismantle the camera**  
To prevent electric shock, do not remove screws or covers. There are no user serviceable parts inside. Contact a qualified service person for servicing.
- **Do not block cooling holes on the bracket**  
This camera has a cooling fan inside. Blocking the cooling holes leads to a build up of heat inside the camera and may cause malfunctions.
- **Do not operate the camera outside the specified temperature, humidity or power source rating range**  
Use the indoor camera under conditions where the temperature is between 0~40°C (32 ~104°F) and the outdoor camera at -50~ 50°C (-58 ~122°F) and in humidity of below 90%.
- **Do not use strong or abrasive detergents when cleaning the camera body**  
Use a dry cloth to clean the camera when dirty. If the dirt is hard to remove, use a mild detergent and wipe gently.
- **Never point the camera towards the sun**  
Do not aim the camera at bright objects. Whether the camera is in use or not, never aim it at the sun or other extremely bright objects. Otherwise, the camera may be smeared or damaged.

## Table of Contents

<b>1. Overview .....</b>	<b>6</b>
1.1 Product Features .....	7
1.2 Product Application.....	8
<b>2. Connecting the PTZ Camera .....</b>	<b>9</b>
2.1 Package Content.....	9
2.2 Switch/Connector Definition .....	11
2.3 Communication Switch Setting.....	11
2.4 PTZ Camera ID Setting .....	12
2.5 PTZ Camera Control Protocol .....	13
2.6 22-Pin Connector Definition .....	14
2.7 RS-485 Connector.....	15
<b>3. Operation and Configuration .....</b>	<b>16</b>
3.1 OSD Display Format .....	16
3.2 OSD Menu Tree .....	17
3.2.1 18×/26× Model.....	17
3.2.2 23×/35× Model.....	20
3.3 Configuration Menu .....	23
3.3.1 LANGUAGE.....	23
3.3.2 DEFAULT CAMERA .....	24
3.3.3 BACKLIGHT .....	24
3.3.4 FOCUS .....	25
3.3.5 AE MODE .....	27
3.3.6 WBC MODE .....	29
3.3.7 SETUP MENU 1 .....	31
• ZOOM SPEED.....	32
• DIGITAL ZOOM .....	32
• SLOW SHUTTER .....	32
• DIGITAL NOISE REDUCTION (35× Model) .....	33
• IMAGE INVERSE .....	33
• FREEZE.....	34
• APERTURE .....	34
• STABILIZER (35× Model) .....	34
• EXIT .....	34
3.3.8 SETUP MENU 2 .....	35
• FLIP .....	35
• ANGLE ADJUSTER.....	36
• SPEED BY ZOOM .....	36
• AUTO CALI. (Auto Calibration).....	36
• SYSTEM RESET .....	37

•	EXIT .....	37
3.3.9	ID DISPLAY .....	38
3.3.10	TITLE DISPLAY .....	38
3.3.11	TITLE SETTING .....	38
3.3.12	PRESET .....	39
3.3.13	SEQUENCE .....	40
3.3.14	AUTOPAN.....	42
3.3.15	CRUISE .....	44
3.3.16	HOME SETTING .....	45
3.3.17	IR FUNCTION (Removable IR Blocking).....	47
3.3.18	ALARM SETTING.....	49
3.3.19	ALARM DETECT .....	52
3.3.20	WDR FUNCTION (18x/26x/23x/35x Model).....	55
3.3.21	PRIVACY MASK .....	57
3.3.22	TIME SETTING .....	61
3.3.23	SCHEDULE .....	62
3.3.24	EXIT OSD .....	63
<b>Appendix A: Technical Specifications .....</b>		<b>64</b>
<b>OSD Menu Notes.....</b>		<b>66</b>
	<18x/26x Model> .....	66
	23x/35x Model> .....	69

## 1. Overview

The ZC-PT series integrated indoor PTZ Camera is a new sub-compact model designed to deliver superb performance and durability combined with an intelligent and stylish housing that is suitable for any security and surveillance installation. The ZC-PT-XT series is a new weather resistant integrated outdoor PTZ Camera. The ZC-PT and ZC-PT-XT series support a standard wiring concept for easy installation, and can be integrated with CCTV products, such as DVRs, control keyboards and CCTV accessories to provide a total surveillance solution.

The PTZ Camera range includes four models of new generation advanced DSP colour cameras:

- ZC-PT235 Model: 35× optical zoom / 12× digital magnification
- ZC-PT226 model: 26× optical zoom / 12× digital magnification
- ZC-PT223 model: 23× optical zoom / 12× digital magnification
- ZC-PT218 model: 18× optical zoom / 12× digital magnification

The PTZ Camera delivers up to 432x zoom ratio, enabling it to capture clear images from a long distance away. Continuous auto focus, back light compensation, auto exposure, and digital slow shutter functions ensure clear and high quality images. The key features incorporated to meet your needs include a removable IR blocking filter to 24-hour operation, additional privacy masks specially designed to prevent any intrusive monitoring in specific areas, and Wide Dynamic Range function. The Home function allows the user to specify a preset position as the 'home position' or a default function (sequence/auto-pan/cruise) as 'home function'. The PTZ Camera will automatically return to its home position or function when the user does not operate any of the controls for a set period of time. The unique scheduling function also enables users to program a preset point or function (Sequence/Auto-Pan/Cruise), which is automatically triggered at a certain time.

The PTZ Camera provides variable pan/tilt speeds ranging from a fast patrol of 400° per second to a slow sweep of 5° per second with 0.225° pan accuracy for fast and accurate tracking capability. The 360° continuous rotation and -10°~190° tilt travel capabilities allow an object passing directly underneath the PTZ Camera to be tracked. Up to 256 preset points can be programmed for immediate surveillance of target areas, and users can define Sequence lines, Auto-Pan lines and 1Cruise routes for the camera to operate automatically. In addition, RS-485 communication port is available for remote control purposes.

The PTZ Camera provides 8 alarm inputs and 1 alarm output, and the smart alarm management mechanism can be programmed using the OSD setup menu; certain functions (Preset/Sequence/Auto-Pan/Cruise) can be activated when an alarm is

triggered.

Various built-in protocols including Ganz-PT, Ganz-S, Pelco, VCL, Philips, AD-422 (Manchester) etc., provide connectivity to other surveillance systems, allowing the integrated PTZ Camera to be used in conjunction with systems from other manufacturers.

Dependability and ultra high reliability are key factors of the camera design. Every PTZ Camera is assembled with meticulous care and thorough testing at our ISO 9001 certified factory. High performance, reliability, and reasonable pricing make this camera an ideal solution for even the toughest surveillance requirements.

## 1.1 Product Features

### Precise and Accurate Performance

- Auto Calibration
- Preset accuracy of 0.225°
- Preset speed up to 400°/sec.
- Proportional Pan & Tilt Speed
- Preset Position/Sequence /Auto-Pan /Cruise

### Dynamic Applications

- Multi-language OSD
- Schedule function
- Multiple built-in Protocols
- Up to 24 masking zones (Optional)
- 8 alarm inputs, 1 alarm output
- Motion Detection
- Flexible indoor/outdoor mountings
- Compact lightweight design for easy installation
- Weather resistant housing
- All-in-one type


### Superior Camera Image Quality

- Minimum illumination 0.01 Lux (B/W)
- Digital Slow Shutter
- Electronic Shutter
- Wide Dynamic Range
- Auto White Balance
- Backlight Compensation
- Auto Exposure

- Image Inverse
- Electronic Image Stabilizer (Optional)
- Removable IR blocking filter

## 1.2 Product Application

Connect the PTZ Camera to other devices as shown in the diagram to create a complete video surveillance solution.

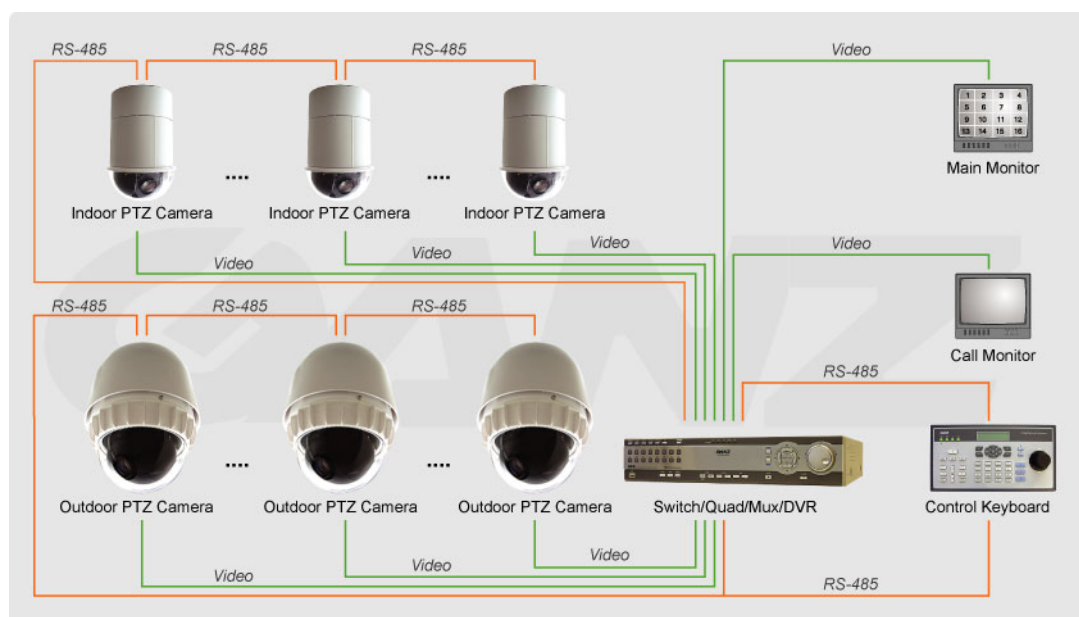

**NOTE:** To extend the network distance up to 1.2 km (4000 feet) and to protect the connected devices, it is highly recommended to place a repeater at the mid-point. However, a repeater may be needed in the network distance less than 1.2 km if the used cables are not the CAT 5 24-gauge cables (see [2.7 RS-485 Connector](#)). Refer to the repeater user manual for detailed information.


## 2. Connecting the PTZ Camera

Please refer to the sections below for details of how to set and connect the PTZ Camera. In order to control PTZ Camera, a control keyboard or alternative control device is required.

### 2.1 Package Content

Before proceeding, please check that the box contains the items listed here. If any item is missing or has defects, DO NOT install or operate the product and contact your dealer immediately for assistance.


#### Indoor PTZ Camera Standard Package

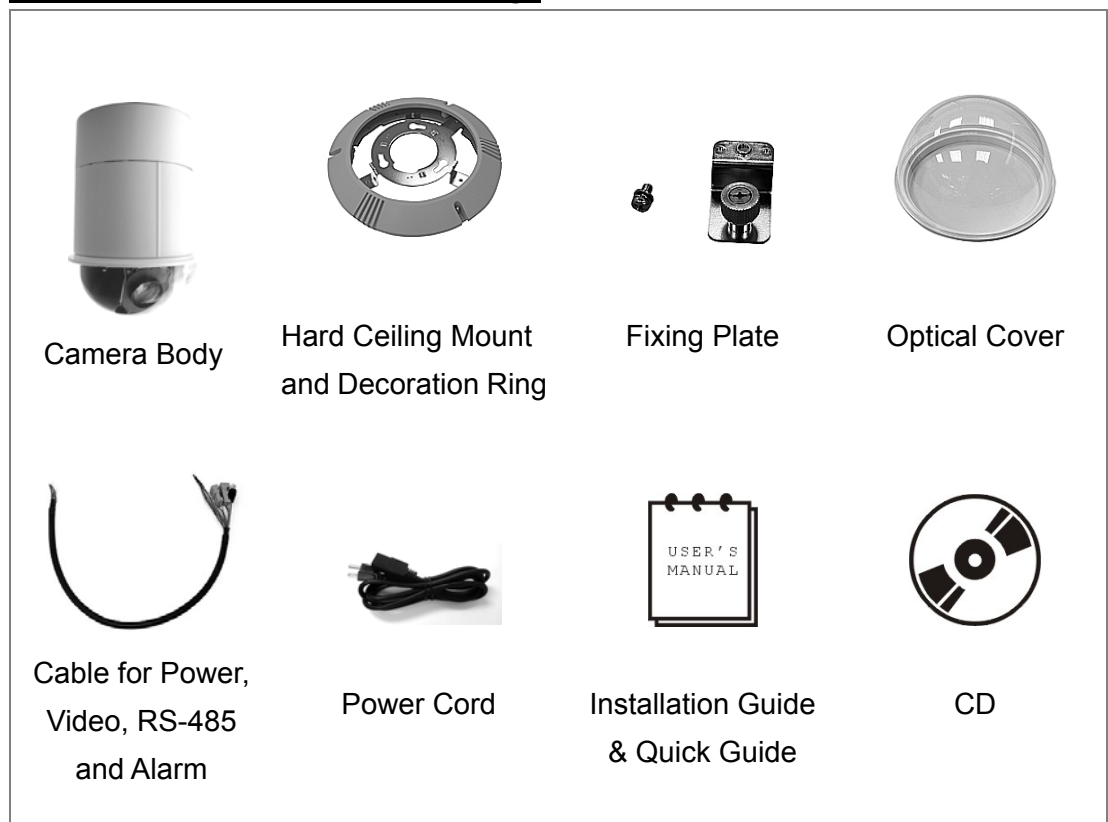

**Outdoor PTZ Camera Standard Package**



Camera Body &  
Vandal Proof Cover



Screws



Security screw  
set



Water-proof rubber



Lubricant



Cable for Power,  
Video, RS-485  
and Alarm



Power Cord




Installation Guide  
& Quick Guide



CD

## 2.2 Switch/Connector Definition

The PTZ Camera's ID and communication protocol must be configured before connecting the camera to other devices. The switches used to configure these settings are located on the bottom of the PTZ Camera.

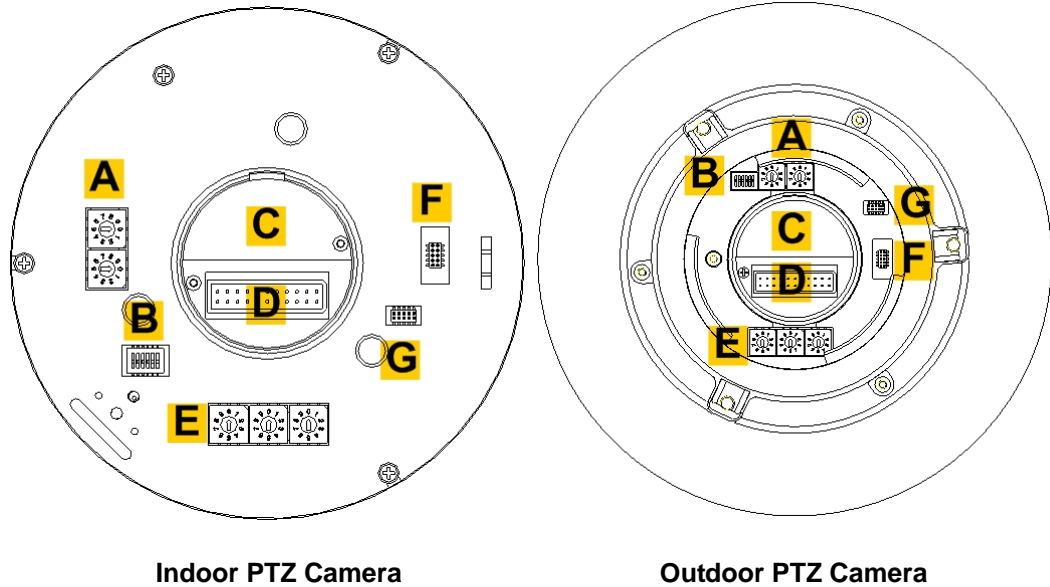

<b>A</b>	Camera Control Protocol Switch
<b>B</b>	Communication Switch
<b>C</b>	None
<b>D</b>	22-Pin Connector
<b>E</b>	ID Switch
<b>F</b>	Reserved
<b>G</b>	ISP Connector (for FW upgrade)


## 2.3 Communication Switch Setting

The table below shows the function of each pin within the communication switch.

Communication switch	SW 1	SW 2
	SW 3	RS-485 setting
	SW 4	Termination
	SW 5	Line lock
	SW 6	Factory Default Reset
	SW 1	Reserved
	SW 2	Reserved

RS-485 is the interface that allows the PTZ Camera to communicate with its control unit; the RS-485 configuration on the PTZ Camera and the control unit must therefore be the same. The default RS-485 setting is half-duplex. Please do not change the

default setting without seeking the advice of a qualified specialist or the supplier. The SW 3 and SW 4 are used for termination and line lock adjustment respectively. The SW 5 is mainly used when users want to restore the camera to the factory default status; moreover, once firmware upgrade is carried out, users also need to reset the SW 5 afterward.

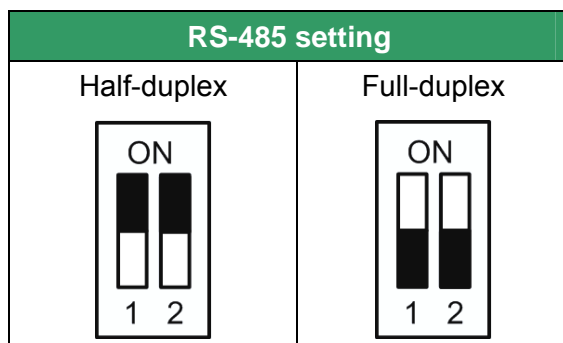


## 2.4 PTZ Camera ID Setting

Use the switch to change your PTZ Camera ID by turning the arrow to the desired number. For example, if the camera ID is 123, the ID switch should be set as below.



**NOTE:** No two cameras should be given the same ID, or communication conflict may occur.

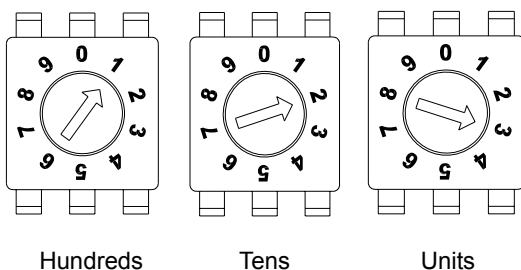

**NOTE:** The number “0” should be located at the top as shown in the diagram above to ensure correct switch definition.


## 2.5 PTZ Camera Control Protocol

A protocol is a specific set of rules and procedures used for data communication. Define the protocol you are going to use based on the devices in your surveillance system. Generally, you should use a single protocol even if the devices are supplied by different manufacturers. Use the switch to set your PTZ Camera control protocol and the baud rate. Refer to the table below and turn the arrow to choose a protocol for your camera.

Switch no.	Protocol	Baud rate
00	VCL	9600
01	Pelco D	2400
02	Pelco P	4800
04	Chiper	9600
05	Philips	9600
07	GANZ-PT	9600
08	AD422	4800
09	DM P	9600
11	Pelco D	4800
12	Pelco D	9600
13	Pelco P	2400
14	Pelco P	9600
15	JVC	9600
16	GANZ-S	4800
17	GANZ-S	9600
18	GANZ-S	19200
19	GANZ-S	38400
21	KALATEL RS485	9600
22	KALATEL RS422	4800

\*GANZ-PT is for ZC-PT series PTZ Camera. GANZ-S is for ZC-S series PTZ Camera.

For example, select protocol Pelco D with a baud rate of 2400, the protocol switch should be set as shown below.

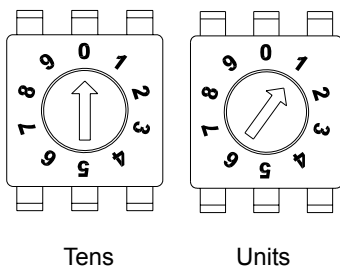




**NOTE:** Change the PTZ Camera's control protocol only when the camera is powered off.

After changing protocol, please do the following procedure:

- (1) Set SW 5 (Communication switch) on.
- (2) Power on the camera and check the message on the screen.
- (3) Power off and set SW 5(Communication switch) off.
- (4) Power on again.


## 2.6 22-Pin Connector Definition

A data cable (as shown below) is supplied with the PTZ Camera for quick installation, e.g. for demonstration or testing purposes.

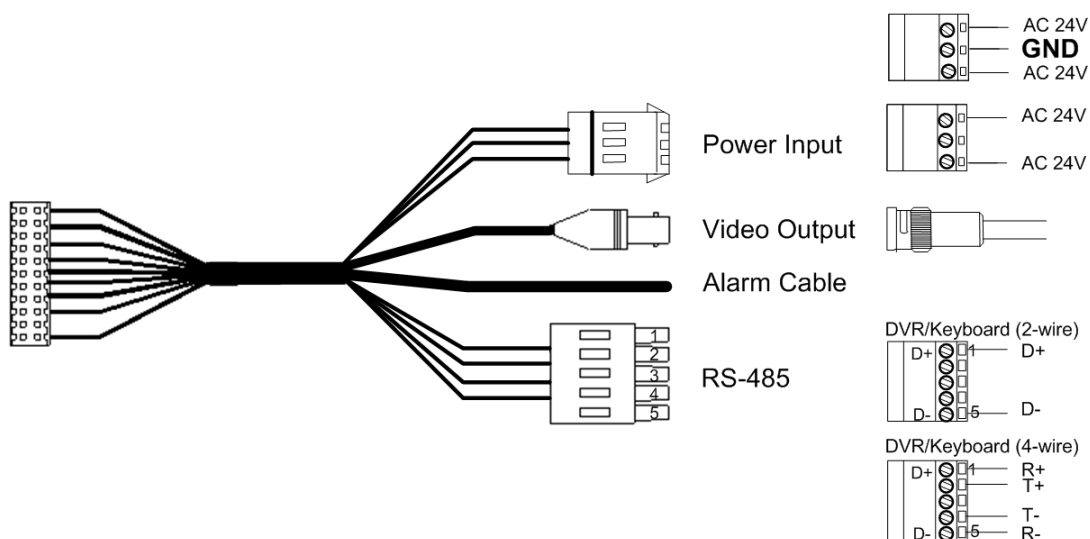

**NOTE:** If the power lines use three wires, make sure the **Ground** wire is inserted into the mid-pin of the terminal block as shown in the figure above.

The 22-pin connector definition is listed in the table below.



Pin	Definition	Cable
1	AC 24-1	20AWG/18AWG
2	ALM NC	
3	AC 24-2	20AWG/18AWG
4	ALM NO	
5	FG	20AWG/18AWG
6	ALM COM	
7	T+	24AWG
8	R-	
9	T-	
10	R+	
11	Alarm ISOG	

Pin	Definition	Cable
12	ALM-1	
13	ALM-3	
14	ALM-2	
15	ALM-4	
16	ALM-5	
17	ALM-6	
18	ALM-7	
19	ALM-8	
20	ALM GND	
21	VGND	20AWG
22	Video	

## 2.7 RS-485 Connector

RS-485 is the interface that the PTZ Camera uses to communicate with its control unit. Connect the control keyboard to the camera via the terminal block. The recommended cables for RS-485 communication are **CAT 5** cables; the maximum cable length for wire with a gauge above 24 is 4000 feet (1219 meters). If the total cable length exceeds 4000 feet, using a repeater to amplify the signals is recommended.



Pin	Corresponding Pins (22-Pin Connector)	Definition
1	7,10	T+, R+ (D+)
2	Reserved	
3	Reserved	
4	Reserved	
5	8,9	T-, R- (D-)

### 3. Operation and Configuration

#### 3.1 OSD Display Format

The information shown on the screen is described in terms of the corresponding OSD display, its position and its function in the table below.



Position	Function	OSD Display	Description
1	Motion	MOTION	Alarm Detect Message
2	Alarm	ALARM 1	Alarm Message
3	Focus Modes & Backlight	A	Auto Focus Mode
		M	Manual Focus Mode
		X	Back Light Compensation OFF
		B	Back Light Compensation ON
4	Zoom Ratio	x1	Current Zoom Ratio (Optical Zoom→Digital Zoom)
5	Title	<ul style="list-style-type: none"> <li>Maximum 20 characters for each title.</li> <li>16 sets of title are available.</li> </ul>	
6	Camera ID	001	Show the camera ID
7	Time	XXXX/XX/XX XX:XX	Year/Month/Day Hour: Minute

### 3.2 OSD Menu Tree

The OSD setup menu structures of each model is listed separately in the following section. The star symbol indicates the factory default.

For a detailed function description, please refer to section [3.3 Configuration Menu](#).

#### 3.2.1 18x/26x Model

Item	Layer 1	Layer 2	Layer 3	Default	
<b>LANGUAGE</b>	<ENGLISH>, <JAPANESE>, <PORTUGUESE>, <SPANISH>, <FRENCH>, <GERMAN>, <ITALIAN>, <POLISH>, <RUSSIAN>, <TRADITIONAL CHINESE>, <SIMPLIFIED CHINESE>, <TURKISH>			ENGLISH	
<b>DEFAULT CAMERA</b>	<ON>, <OFF>			ON	
<b>BACKLIGHT</b>	<ON>, <OFF>			OFF	
<b>FOCUS</b>	AUTO	AF MODE <NORMAL>, <INTERVAL>, <ZOOM TRIG> EXIT + SAVE: YES		NORMAL	
	MANUAL	FOCUS SPEED <01>~<08> EXIT + SAVE: YES			
<b>AE MODE</b>	EXPOSURE COMP.	<OFF>, EXPOSURE VALUE: <-10.5dB> ~ <10.5dB> EXIT + SAVE: YES		OFF	
		AUTO	EXIT + SAVE: YES		<input type="checkbox"/>
	AE MODE	BRIGHT	BRIGHT VALUE <00> ~ <31> EXIT + SAVE: YES		
		SHUTTER	SHUTTER SPEED <1/10000>~<1> SEC. EXIT + SAVE: YES		
			IRIS	IRIS VALUE <CLOSE>, <F1.6> ~ <F28> EXIT + SAVE: YES	
		MANUAL	BRIGHT VALUE: AUTO		
			SHUTTER SPEED <1/10000> ~ <1>		
			IRIS VALUE <F1.6> ~ <F28>		
			GAIN VALUE <-3>dB ~ <28>dB EXIT + SAVE: YES		
		EXIT + SAVE	YES		
<b>WBC MODE</b>	AUTO (Auto White Balance)			<input type="checkbox"/>	
	INDOOR				
	OUTDOOR				
	ATW (Auto-tracing WBC)				
	MANUAL	R GAIN <000> ~ <127> B GAIN <000> ~ <127> EXIT + SAVE: YES			
<b>SETUP MENU 1</b>	ZOOM SPEED	<1> ~ <8>		8	
	DIGITAL ZOOM	<ON>, <OFF>		ON	
	SLOW SHUTTER	<ON>, <OFF>		OFF	
	IMAGE INVERSE	<ON>, <OFF>		OFF	
	FREEZE	<ON>, <OFF>		OFF	
	APERTURE	<01> ~ <16>		11	
	EXIT	YES			
<b>SETUP MENU 2</b>	FLIP	<OFF>, <M.E.>, <IMAGE> EXIT + SET: YES		OFF	
		ANGLE ADJUSTER	MIN ANGLE <-10 ~ +10 DEG> MAX ANGLE <080 ~ 100 DEG> EXIT + SET: YES		0 90
	SPEED BY ZOOM	<ON>, <OFF>		OFF	

Item	Layer 1	Layer 2	Layer 3	Default
	AUTO CALI.	<ON>, <OFF>		OFF
	SYSTEM RESET	YES		
	EXIT	YES		
ID DISPLAY	<ON>, <OFF>			ON
TITLE DISPLAY	<ON>, <OFF>			OFF
TITLE SETTING	<01> ~ <16>			1
PRESET	PRESET SET	<001>~<256>		ENTER
	PRESET RUN	<001>~<256>		ENTER
	EXIT	YES		ENTER
SEQUENCE	SEQUENCE LINE	<1> ~ <8>		1
	SEQUENCE POINT	<01> ~ <64>		1
	PRESET POS.	<001> ~ <255>, <END>		1
	SPEED	<01> ~ <15>		1
	DWELL TIME	<000> ~ <127> SEC.		0
	RUN SEQUENCE	ENTER		
	EXIT	YES		
AUTOPAN	AUTOPAN LINE	<1> ~ <4>		1
	START POINT	<TO FIND>, <TO SAVE>		
	END POINT	<TO FIND>, <TO SAVE>		
	DIRECTION	<RIGHT>, <LEFT>		RIGHT
	SPEED	<01> ~ <04>		1
	RUN AUTOPAN	ENTER		
	EXIT	YES		
CRUISE	CRUISE LINE	<1> ~ <8>		1
	RECORD START	ENTER		
	RECORD END	ENTER		
	RUN CRUISE	ENTER		
	EXIT	YES		
HOME SETTING	HOME FUNCTION	<ON>, <OFF>		OFF
	SELECT MODE	<PRESET>, <SEQUENCE>, <AUTOPAN>, <CRUISE>		PRESET
	PRESET POINT	<001> ~ <256>		1
	SEQUENCE LINE	<1> ~ <8>		1
	AUTOPAN LINE	<1> ~ <4>		1
	CRUISE LINE	<1> ~ <8>		1
	RETURN TIME	<1> ~ <128> MIN.		1
	GO	ENTER		
EXIT	YES			
IR FUNCTION	<AUTO>	THRESHOLD <01> ~ <29>		AUTO
		EXIT + SAVE: YES		
	<MANUAL>	IR MANUAL: <ON>, <OFF>		
		EXIT + SAVE: YES		
ALARM SETTING	ALARM PIN	<1> ~ <8>		1
	ALARM SWITCH	<ON>, <OFF>		OFF
	ALARM TYPE	<NO> (Normal Open), <NC> (Normal Close)		N.C.
	ALARM ACTION	<PRESET>, <SEQUENCE>, <AUTOPAN>, <CRUISE>		PRESET
	PRESET POINT	<001> ~ <256>		1
	SEQUENCE LINE	<1> ~ <8>		1
	AUTOPAN LINE	<1> ~ <4>		1
	CRUISE LINE	<1> ~ <8>		1
	DWELL TIME	<001> ~ <127> Sec., <ALWAYS>		ALWAYS
	EXIT	YES		
ALARM DETECT	DETECT SWITCH	<ON>, <OFF>		OFF
	DETECT MODE	ON: <INT FOCUS>, <FIX FOCUS>, <FIX AE>, <MOTION>; OFF: NONE		
	BLOCK MODE	NONE; MOTION: <ON>, <OFF>		
	FRAME SET	NONE; MOTION: <01> ~ <04>		
	FRAME DISABLE	NONE; MOTION: <01> ~ <04>		

Item	Layer 1	Layer 2	Layer 3	Default	
	THRESHOLD	NONE; MOTION: <001> ~ <255>			
	EXIT	YES			
<b>WDR FUNCTION</b>	<ON>, <OFF>			OFF	
<b>PRIVACY MASK</b>	PRIVACY SWITCH	<ON>, <OFF>		OFF	
	TRANSPARENCY	<ON>, <OFF>		OFF	
	COLOR	<BLACK>, <HI GRAY>, <LO GRAY>, <WHITE>, <RED>, <GREEN>, <BLUE>, <CYAN>, <YELLOW>, <MAGENTA>		BLACK	
	SET MASK	<01> ~ <24>	H CENTER: L/R		
			V CENTER: D/U		
			H SIZE <000> ~ <080>		
			V SIZE <000> ~ <060>		
CLEAR MASK	<01> ~ <24>				
EXIT	YES				
<b>TIME SETTING</b>	TIME DISPLAY	<ON>, <OFF>		OFF	
	SET YEAR	<00> ~ <99>			
	SET MONTH	<01> ~ <12>			
	SET DAY	<00> ~ <31>			
	SET HOUR	<00> ~ <23>			
	SET MINUTE	<00> ~ <59>			
	EXIT+SAVE				
<b>SCHEDULE</b>	SWITCH	<ON>, <OFF>		OFF	
	POINT	<01> ~ <32>		1	
	HOUR	<00> ~ <23>		0	
	MINUTE	<00> ~ <59>		0	
	MODE	NONE	NO FUNCTION		<input type="checkbox"/>
		PRESET	PRESET POINT <001> ~ <256>		
		SEQUENCE	SEQUENCE LINE <1> ~ <8>		
		AUTOPAN	AUTOPAN LINE <1> ~ <4>		
		CRUISE	CRUISE LINE <1> ~ <8>		
		IR FUNC.	IR FUNCTION <AUTO>, <ON>, <OFF>		
SCHEDULE RESET	YES				
EXIT	YES				
<b>EXIT OSD</b>	YES				



Item	Layer 1	Layer 2	Layer 3	Default
<b>PRESET</b>	PRESET SET	<001>~<256>		ENTER
	PRESET RUN	<001>~<256>		ENTER
	EXIT	YES		ENTER
<b>SEQUENCE</b>	SEQUENCE LINE	<1> ~ <8>		1
	SEQUENCE POINT	<01> ~ <64>		1
	PRESET POS.	<001> ~ <255>, <END>		1
	SPEED	<01> ~ <15>		1
	DWELL TIME	<000> ~ <127> SEC.		0
	RUN SEQUENCE	ENTER		
	EXIT	YES		
<b>AUTOPAN</b>	AUTOPAN LINE	<1> ~ <4>		1
	START POINT	<TO FIND>, <TO SAVE>		
	END POINT	<TO FIND>, <TO SAVE>		
	DIRECTION	<RIGHT>, <LEFT>		RIGHT
	SPEED	<01> ~ <04>		1
	RUN AUTOPAN	ENTER		
	EXIT	YES		
<b>CRUISE</b>	CRUISE LINE	<1> ~ <8>		1
	RECORD START	ENTER		
	RECORD END	ENTER		
	RUN CRUISE	ENTER		
	EXIT	YES		
<b>HOME SETTING</b>	HOME FUNCTION	<ON>, <OFF>		OFF
	SELECT MODE	<PRESET>, <SEQUENCE>, <AUTOPAN>, <CRUISE>		PRESET
	PRESET POINT	<001> ~ <256>		1
	SEQUENCE LINE	<1> ~ <8>		1
	AUTOPAN LINE	<1> ~ <4>		1
	CRUISE LINE	<1> ~ <8>		1
	RETURN TIME	<1> ~ <128> MIN.		1
	GO	ENTER		
EXIT	YES			
<b>IR FUNCTION</b> (23×/35× Model)	<AUTO>, <ON>, <OFF>	35× Model: THRESHOLD <01> ~ <13>		AUTO
		23× Model: THRESHOLD <MID>, <HI>, <LOW>		
		IR COLOR <B/W>, <COLOR>		
		EXIT + SAVE: YES		
<b>ALARM SETTING</b>	ALARM PIN	<1> ~ <8>		1
	ALARM SWITCH	<ON>, <OFF>		OFF
	ALARM TYPE	<NO> (Normal Open), <NC> (Normal Close)		N.C.
	ALARM ACTION	<PRESET>, <SEQUENCE>, <AUTOPAN>, <CRUISE>		PRESET
	PRESET POINT	<001> ~ <256>		1
	SEQUENCE LINE	<1> ~ <8>		1
	AUTOPAN LINE	<1> ~ <4>		1
	CRUISE LINE	<1> ~ <8>		1
	DWELL TIME	<001> ~ <127> Sec., <ALWAYS>		ALWAYS
EXIT	YES			
<b>ALARM DETECT</b> (23×/35× Model)	<ON>, <OFF>			OFF
<b>WDR FUNCTION</b> (23×/35× Model)	<ON>	RATIO LEVEL <000> ~ <128> SHUTTER SPEED <000> ~ <128> IRIS OFFSET <000> ~ <128> EXIT <YES>		
	<AUTO>			
	<OFF>			□
<b>PRIVACY MASK</b> (23×/35× Model)	PRIVACY SWITCH	<ON>, <OFF>		OFF
	MASK SHADE	<GRAY>, <WHITE>, <BLACK>		BLACK
	SET MASK	<01> ~ <08>	H CENTER <000> ~ <255>	

Item	Layer 1	Layer 2	Layer 3	Default
			V CENTER<000> ~ <255>	
			H SIZE <000> ~ <127>	
			V SIZE <000> ~ <127>	
			EXIT + SAVE	
			CLEAR MASK	<01> ~ <08>, <RESET>
MASK DISPLAY	<FIRST>, <LAST>	FIRST		
EXIT	YES			
<b>TIME SETTING</b>	TIME DISPLAY	<ON>, <OFF>	OFF	
	SET YEAR	<00> ~ <99>		
	SET MONTH	<01> ~ <12>		
	SET DAY	<00> ~ <31>		
	SET HOUR	<00> ~ <23>		
	SET MINUTE	<00> ~ <59>		
	EXIT+SAVE			
<b>SCHEDULE</b>	SWITCH	<ON>, <OFF>	OFF	
	POINT	<01> ~ <32>	1	
	HOUR	<00> ~ <23>	0	
	MINUTE	<00> ~ <59>	0	
	MODE	NONE	NO FUNCTION	<input type="checkbox"/>
		PRESET	PRESET POINT <001> ~ <256>	
		SEQUENCE	SEQUENCE LINE <1> ~ <8>	
		AUTOPAN	AUTOPAN LINE <1> ~ <4>	
		CRUISE	CRUISE LINE <1> ~ <8>	
		IR FUNC.	IR FUNCTION <AUTO>, <ON>, <OFF>	
SCHEDULE RESET	YES			
EXIT	YES			
<b>EXIT OSD</b>	YES			

### 3.3 Configuration Menu

The detailed functions and parameter settings for your PTZ Camera can be set in the OSD (On Screen Display) menu using a control unit, such as a control keyboard (ZCA-SC201). The items in each model's OSD menu are described in the following sections.

**To enter the OSD menu** for the selected camera, press the <CAMERA MENU> button on the control keyboard and hold for 3 seconds to enter the OSD menu.

**To select the setup option**, use the direction keys on the keyboard to move the cursor in the OSD menu.

**To set an item**, use the direction keys on the keyboard to move the cursor in the OSD menu. For items with →, press the right/left direction buttons on the control keyboard to select. For items with ↓, press the <CAMERA MENU> button on the control keyboard to enter the sub-menu. For items with →↓, users can use the right/left direction buttons to select functions then press the <CAMERA MENU> button on the control keyboard to enter its sub-menu.

For further detailed setup procedures, please refer to the user manual for the installed control units.

#### 3.3.1 LANGUAGE

The camera supports multi-language operation; the available languages include English, Japanese, Portuguese, Spanish, French, German, Italian, Polish, Russian, Traditional Chinese, Simplified Chinese and Turkish. As you select a language with the arrow keys, the OSD will automatically change to the language you selected. The default language is <ENGLISH>.

MAIN PAGE 1	
LANGUAGE	ENGLISH
DEFAULT CAMERA	ON
BACKLIGHT	OFF
FOCUS	AUTO
AE MODE	ENTER
WBC MODE	AUTO
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER

### 3.3.2 DEFAULT CAMERA

The DEFAULT CAMERA option is used to restore some camera settings back to default setting. The settings that are affected include Backlight, Focus, AE, WBC, Aperture, Zoom Speed and Digital Zoom. Once any one of the items is modified, the setting will become <OFF> automatically. Select <ON> for this item to recall the mentioned camera parameters.



**NOTE:** Zoom Speed will be restored to factory defaults only in 18x and 26x models.

### 3.3.3 BACKLIGHT

The backlight compensation function prevents the central object from being too dark in surroundings where excessive light is shining from behind it.

#### **18x/26x Model:**

Select <ON> to activate the function; the center object will be brightened in contrast to the edge of the picture (where a backlight would be most likely located).

After completing setup of backlight, go back to the **Main Page 1** and continue to set the focus relevant values.

MAIN PAGE 1	
LANGUAGE	ENGLISH
DEFAULT CAMERA	ON
BACKLIGHT	OFF
FOCUS	AUTO
AE MODE	ENTER
WBC MODE	AUTO
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER

#### **/23x/35x Model:**

The Backlight Compensation Level ranges from 00 to 30.

BLC LEVEL	00
EXIT+SAVE	YES



**NOTE:** If this function is enabled, the WDR function (for 23x and 35x models) will be disabled automatically. For details, refer to section [3.3.20 WDR FUNCTION](#).

After completing setup of backlight, go back to the **Main Page 1** and continue to set the focus values.

MAIN PAGE 1	
LANGUAGE	ENGLISH
DEFAULT CAMERA	ON
BACKLIGHT	OFF
FOCUS	AUTO
AE MODE	AUTO
WBC MODE	AUTO
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER

### 3.3.4 FOCUS

The focus of the PTZ Camera can be operated in two modes: Auto Focus mode and Manual Focus mode. Various settings for different models are described as follows.

#### 18x/26x Model:

- **AUTO**

The optimum focus is achieved using the internal digital circuit. There are 3 modes for users to select for different conditions.

**Normal AF (auto focus) mode:** The PTZ Camera will automatically adjust the focus of the picture.

**Zoom trigger mode:** When the zoom ratio is changed using the TELE or WIDE buttons on the control keyboard or another control unit, the PTZ Camera will automatically adjust the focus again after a period of time (the factory default value is five seconds) until the commands of TELE/WIDE is terminated.

**Interval AF mode:** This mode is used for AF movements carried out at particular intervals. If users pan/tilt the PTZ Camera, the PTZ Camera will focus automatically after a period of time. The initial value is five seconds.

- **MANUAL**

In this focus mode, users can adjust the focus speed, ranging from 01 ~ 08.

FOCUS SPEED	01
EXIT + SAVE	YES

After completing setup of focus, go back to the **Main Page 1** and continue to set the AE mode.

MAIN PAGE 1	
LANGUAGE	ENGLISH
DEFAULT CAMERA	ON
BACKLIGHT	OFF
FOCUS	AUTO
AE MODE	ENTER
WBC MODE	AUTO
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER

**23x/35x Model:**

- **AUTO**

The optimum focus is achieved using the internal digital circuit. Users can adjust the minimum auto focus range for certain special conditions; the options include <1.5 m> (35x model only), <1 m>, <30 cm>, <10 cm> and <1 cm>.

TUNING VALUE	10CM
EXIT + SAVE	YES

- **MANUAL**

In this focus mode, users can adjust the focus speed, ranging from 0 ~ 3.

FOCUS SPEED	0
EXIT + SAVE	YES

After completing setup of focus, go back to the **Main Page 1** and continue to set the AE mode.

MAIN PAGE 1	
LANGUAGE	ENGLISH
DEFAULT CAMERA	ON
BACKLIGHT	OFF
FOCUS	AUTO
AE MODE	AUTO
WBC MODE	AUTO
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER

### 3.3.5

## AE MODE

The exposure is the amount of light captured by the image sensor and is determined by the width of lens diaphragm opening (iris adjustment), the amount of exposure by the sensor (shutter speed) and other exposure parameters. This option allows users to define how the Auto Exposure (AE) function works.

### 18x/26x Model:

- **EXPOSURE COMPENSATION**

The exposure value ranges from -10.5dB ~ 10.5dB. Select <OFF> to disable the function.



**NOTE:** For 18x and 26x models, this function can be adjusted through <Brightness>/<Iris> key on the control keyboard.

- **AE MODE**

### **AUTO**

In this mode, the camera's Brightness, Shutter Speed, IRIS and AGC (Auto Gain Control) control circuits work together automatically to get consistent video output level.



**NOTE:** For 18x and 26x models, if not in **AUTO** exposure mode, IR cut filter cannot automatically switch to Day/Night mode.

### **BRIGHT**

The brightness control function adjusts the IRIS and AGC gain using an internal algorithm. Brightness is controlled by gain when the light condition is dark and by iris when the light condition is bright. The bright value ranges from 00 ~ 31.

### **SHUTTER**

With this option, SHUTTER speed takes main control of exposure, and both IRIS and AGC will function automatically in cooperation with shutter speed to achieve consistent exposure output. The shutter speed ranges from 1/10000 ~ 1.

### **IRIS**

With this option, the IRIS function adjusts exposure in higher property. SHUTTER speed and AGC circuit will function automatically in cooperating with IRIS to get consistent exposure output. The opening of a lens controls the amount of light reaching to the surface of the selected device. By increasing the F-stop number (F1.6, F2, F2.4, etc.), less light is permitted to

pass; options range from F1.6 ~ F28.

## MANUAL

In the mode, users can adjust shutter speed (1/10000 ~ 1), iris value (F1.6 ~ F28) and gain value (-3dB ~ 28dB).

- **EXIT**

Exit the AE MODE menu and go back to the **Main Page 1** to continue to set the WBC mode.

MAIN PAGE 1	
LANGUAGE	ENGLISH
DEFAULT CAMERA	ON
BACKLIGHT	OFF
FOCUS	AUTO
AE MODE	ENTER
WBC MODE	AUTO
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER

### 23x/35x Model:

- **AUTO**

In this mode, the camera's shutter, IRIS and AGC control functions work together automatically to adjust the light exposure of the image sensor in order to obtain a consistent video output level. IRIS OFF SET is used to set the level of IRIS variation (00 ~ 15).

- **SHUTTER**

With this option, the priority of SHUTTER is higher than IRIS and AGC; IRIS and AGC circuit will function automatically in cooperating with SHUTTER to get consistent exposure. The range of shutter speed for 35x model is: 1/30000 ~ 1, for 23x model is: 1/30000 ~ 1/2.

- **IRIS**

With this option, the priority of IRIS is higher than SHUTTER and AGC; SHUTTER and AGC circuit will function automatically in cooperating with IRIS to get consistent exposure. The range of Iris level is between 00 and 09.

- **AGC**

With this option, the priority of AGC is higher than SHUTTER and IRIS; SHUTTER and IRIS circuit will function automatically in cooperating with AGC to get consistent exposure. The range of AGC level is between 00 and 05.



**NOTE:** For 23× and 35× models, If AE MODE is set as SHUTTER, IRIS or AGC mode rather than AUTO mode, the following functions will be turned off automatically: WDR, Digital Slow Shutter and Alarm Detect. Additionally, when WDR/Alarm Detect is turned on, AE MODE will become **AUTO**. In the same situation, if the camera's IR function was set as IR AUTO mode, it will become invalid even though the OSD display remains the same.

After completing various parameter setups, please exit the AE MODE menu and go back to the **Main Page 1** to continue to set the WBC mode.

MAIN PAGE 1	
LANGUAGE	ENGLISH
DEFAULT CAMERA	ON
BACKLIGHT	OFF
FOCUS	AUTO
AE MODE	AUTO
WBC MODE	AUTO
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER

### 3.3.6 WBC MODE

A digital camera needs to find a reference colour temperature, which is a way of measuring the quality of a light source, in order to correctly calculate all the other colours. The unit for measuring this ratio is degrees Kelvin (K). You can select one of the white balance control modes depending on the conditions. The following table shows the colour temperature of some light sources.

Light source	Colour temperature in K
Cloudy sky	6,000 to 8,000
Noon sun and clear sky	6,500
Household lighting	2,500 to 3,000
75 watt bulb	2,820
Candle flame	1,200 to 1,500

#### 18×/26× Model:

- **AUTO**

In this mode, the white balance function works within its colour temperature range. This mode computes the white balance value output using colour information from the entire screen. It outputs the appropriate value using the colour temperature radiating from a black subject based on a range of values from 3000K to 7500K.

- **INDOOR**  
3200 K base mode.
- **OUTDOOR**  
5800 K base mode.
- **ATW**  
The PTZ Camera records the signals from a screen in the range from 2000 K to 10000 K.
- **MANUAL**  
In this mode, the user can change the white balance value manually; R gain and B gain are adjustable in the range from 0 to 127.

WBC MENU		
R GAIN		050
B GAIN		050
EXIT + SAVE		YES

After WBC relevant parameter setups are completed, please exit the WBC MODE menu and go back to the **Main Page 1** to continue to set other functions under the Setup Menu 1.

MAIN PAGE 1		
LANGUAGE		ENGLISH
DEFAULT CAMERA		ON
BACKLIGHT		OFF
FOCUS		AUTO
AE MODE		ENTER
WBC MODE		AUTO
SETUP MENU 1		ENTER
SETUP MENU 2		ENTER

### 23x/35x Model:

- **AUTO**  
In this mode, the white balance function works within its colour temperature range and calculates the best-fit white balance value.
- **MANUAL**  
In this mode, users can change the white balance value manually; R gain and B gain are adjustable in the range from 0 to 99.

WBC MENU		
R GAIN		50
B GAIN		50
EXIT + SAVE		YES

After WBC relevant parameter setups are completed, please exit the WBC MODE menu and go back to the **Main Page 1** to continue to set other functions under the Setup Menu 1.

MAIN PAGE 1	
LANGUAGE	ENGLISH
DEFAULT CAMERA	ON
BACKLIGHT	OFF
FOCUS	AUTO
AE MODE	AUTO
WBC MODE	AUTO
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER

### 3.3.7 SETUP MENU 1

In Setup Menu 1, users could set Zoom Speed and choose whether to activate functions including Digital Zoom, Slow Shutter, Noise Reduction, Image Inverse and Image Freeze. Refer to the following description for use of each function.

#### 18x/26x Model:

SETUP MENU 1	
ZOOM SPEED	8
DIGITAL ZOOM	ON
SLOW SHUTTER	OFF
IMAGE INVERSE	OFF
FREEZE	OFF
APERTURE	11
EXIT	YES

#### 35x Model

SETUP MENU 1	
ZOOM SPEED	FAST
DIGITAL ZOOM	OFF
SLOW SHUTTER	1/50
D.N.R.	01
IMAGE INVERSE	OFF
FREEZE	OFF
APERTURE	AUTO
STABILIZER	OFF
EXIT	YES

#### 23xModel:

SETUP MENU 1	
ZOOM SPEED	FAST
DIGITAL ZOOM	OFF
SLOW SHUTTER	1/50
IMAGE INVERSE	OFF
FREEZE	OFF
APERTURE	AUTO
EXIT	YES

- **ZOOM SPEED**

This option is used to set the zoom speed for operating the PTZ Camera.

**18x/26x Model:**

For these models, the zoom speed options are <1> (slow) ~ <8> (fast). The default setting is <8>.

**23x/35x Model:**

For this model, the options are <FAST> (default) and <SLOW>.

- **DIGITAL ZOOM**

This option allows users to enable or disable the 12x digital zoom. The digital zoom is activated after the full optical zoom level has been reached.



**NOTE:** The difference between optical and digital zoom is that optical zoom uses the lens within the camera to draw the image closer by zooming in or out to achieve the desired effect. Optical zoom retains the full resolution and quality of the zoomed image. By contrast, digital zoom takes a portion of the image and expands that portion to the full size of the image; however the image quality will be reduced.

**18x/26x Model:**

For these models, maximum 12x digital zoom function can be enabled. The default setting is <ON>.

**23x/35x Model:**

For these models, the digital zoom ratio is adjustable from <02> to <12>. The default setting is <OFF>. For 35x model, if Image Stabilization function is turned on, it will limit the effect of Digital Zoom.

- **SLOW SHUTTER**

The shutter speed determines how long the image sensor is exposed to light. To see a clear image in a dark environment, please enable this function and select a slower shutter speed.

**18x/26x Model:**

When the digital slow shutter function is enabled, the PTZ Camera will automatically adjust the shutter speed basing on the lighting condition of the installation environment. It enables users to see objects in a dark environment under 0.1 lux.

**23×/35× Model:**

The shutter speed is adjustable in 23× and 35× models. With the slowest shutter speed, the user can see objects in a dark environment under 0.1 lux or see smooth video image with a higher shutter speed. For the 23× model, the options are from <1/2> to <1/60> (NTSC) and <1/1.5> to <1/50> (PAL). For the 35× model, the slow shutter speed is adjustable from <1> to <1/60> (NTSC) and from <1> to <1/50> (PAL).



**NOTE:** For 23× and 35× models, the Digital Slow Shutter function is conditional on 1) shutter speed: > 1/50 or 1/60; 2) in AE AUTO mode; 3) Image Stabilizer function is OFF.

- **DIGITAL NOISE REDUCTION (35× Model)**

For the 35× model, the D.N.R. is adjustable from <1> to <4>; level 4 achieves best denoising results.

- **IMAGE INVERSE**

Users can select <ON> to make the displayed image inverted vertically and horizontally (see the figures shown below). Occasions to employ the function include conferences, demonstration, testing, etc. The default setting is <OFF>.

**Application:** Users can see the displayed images, as shown below, when a dome is placed on the desk top in a conference, for instance.

IMAGE INVERSE (OFF)



IMAGE INVERSE (ON)



**NOTE:** When Image Inverse function is enabled, the privacy mask(s) will be set off automatically (see [3.3.21 PRIVACY MASK](#)). For 23× and 35× models, if WDR (see [3.3.20 WDR FUNCTION](#)) is set as **ON**, all the parameters of WDR will have no effect unless Image Inverse is turned off.

- **FREEZE**

Freeze function allows to hold the image while the camera is moving between preset positions such as in PRESET (see section 3.3.12) and SEQUENCE (see section 3.3.13) modes. For example, when the Dome Camera is manipulated to run from point A to point B, if the Freeze function is activated, the first view that users would see is point A. Then the next view would directly change to point B, without displaying the moving path.

- **APERTURE**

Under this setup menu, users can adjust enhancement of the edges of objects in the picture.

**18x/26x Model:**

There are 16 levels of adjustment; the options are <01> ~ <16>; <01> represents “no enhancement”. When shooting text, this function could make it sharp.

**23x/35x Model:**

Users can select either the <AUTO> mode or <MANUAL> mode. Under the <MANUAL> mode, the parameters of H aperture and V aperture are adjustable, ranging from 00 to 31.

APERTURE MENU	
H APERTURE	00
V APERTURE	00
EXIT + SAVE	YES

- **STABILIZER (35x Model)**

With the Image Stabilizer Function, the PTZ Camera can capture images that would otherwise be blurred due to the vibration. The built-in electronic compensation filters out the vibrations of up to 80% movement at 10Hz, as caused by wind and other environmental conditions. Its various detection mode ensures total detection for all types of environment. If the function is activated, users could select the frequency range of either 10Hz or 5 Hz.



**NOTE:** If the function is turned on, it will result in 1) WDR function: OFF; 2) Digital Slow Shutter: no function; 3) limitation in Digital Zoom capability.

- **EXIT**

Exit the SETUP MENU 1 and go back to the **MAIN PAGE 1** to set other

functions under the Setup Menu 2.

**18x/26x Model:**

MAIN PAGE 1	
LANGUAGE	ENGLISH
DEFAULT CAMERA	ON
BACKLIGHT	OFF
FOCUS	AUTO
AE MODE	ENTER
WBC MODE	AUTO
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER

**23x/35x Model:**

MAIN PAGE 1	
LANGUAGE	ENGLISH
DEFAULT CAMERA	ON
BACKLIGHT	OFF
FOCUS	AUTO
AE MODE	AUTO
WBC MODE	AUTO
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER

**3.3.8**

**SETUP MENU 2**

**18x/23x/26x/35x Model:**

SETUP MENU 2	
FLIP	ENTER
ANGLE ADJUSTER	ENTER
SPEED BY ZOOM	OFF
AUTO CALI.	OFF
SYSTEM RESET	YES
EXIT	YES

- **FLIP**

The user can track an object continuously when it passes under the PTZ Camera with a Flip setting of IMAGE (digital flip) or M.E. (mechanical flip).

FLIP SETTING	
FLIP	OFF
EXIT + SET	YES

**IMAGE**

IMAGE represents digital IMAGE FLIP, which enables users to keep tracking objects seamlessly; under the mode, almost no delay occurs in comparing with that under the M.E. mode.



**NOTE:** The Privacy Mask function will be automatically disabled if the Image Flip function is enabled, and the screen will show “MASK WILL BE SET OFF.”

**M.E. (Mechanical Flip)**

M.E. is a standard mechanical operation. As the camera tilts to the maximum angle, it will pan 180°, and then continue tilting to keep tracking objects.



**NOTE:** Flip setting is manual-controlled only. If a Preset or a point for other function (ex. Sequence) is set in the position that can only be reached through FLIP motion, when Flip is off, the position cannot be reached anymore.

## OFF

Select this option to disable the flip function.



**NOTE:** To make the PTZ Camera tilt between a specific range, such as  $-10^{\circ}$  to  $+100^{\circ}$  or  $-10^{\circ} \sim +190^{\circ}$ , please go to ANGLE ADJUSTER (see next section) to set the angle range of tilt. Otherwise, the camera will tilt  $90^{\circ}$  as the default setting.

- **ANGLE ADJUSTER**

The item is for adjusting the angle range of tilt motion. The Range of the view angle varies in different FLIP modes: the angle ranges from  $-10^{\circ}$  to  $+100^{\circ}$  in the M.E. FLIP and FLIP OFF modes, and from  $-10^{\circ} \sim +190^{\circ}$  in the IMAGE FLIP mode.

ANGLE ADJUSTER	
ADJUST MIN ANGLE	-10 DEG
ADJUST MAX ANGLE	100 DEG
EXIT+SET	YES

- **SPEED BY ZOOM**

If the option is set to <ON>, the pan/tilt speed will be automatically adjusted by internal algorithm when zooming. The larger zoom ratio results in a slower rotation speed.

- **AUTO CALI. (Auto Calibration)**

There are one horizontal point and one vertical infrared rays check point in each PTZ Camera. During installation or maintenance, the PTZ Camera's position may be moved. Therefore, the relative distance between the original set point and the check point will be changed. If enable the Auto Calibration function, the camera will automatically detect the matter and reset the horizontal point back to the original position.

- **SYSTEM RESET**

Select this item for system reboot.

**SYSTEM RESET**

Select this function for system reboot. Press “ENTER” and system reboot will start up.

**DEFAULT SYSTEM**

This function allows users to restore the camera to its factory default state. Press “ENTER” and reset will start up.

- **EXIT**

Exit the SETUP MENU 2 and go back to the **MAIN PAGE 1**. Then go to the **MAIN PAGE 2** to carry on setting other functions.

MAIN PAGE 2	
ID DISPLAY	ON
TITLE DISPLAY	OFF
TITLE SETTING	01
PRESET	ENTER
SEQUENCE	ENTER
AUTOPAN	ENTER
CRUISE	ENTER
HOME SETTING	ENTER

### 3.3.9 ID DISPLAY

Press the direction key down to turn the MAIN MENU page from 1 to 2, and then the menu item <ID DISPLAY> will be shown on the top. Users are allowed to choose whether the Dome Camera's ID will be displayed on screen for identifying the domes. For more information, refer to section [2.4 PTZ Camera ID Setting](#).

- **ON**  
Display the ID address of the selected camera on the right bottom of the screen.
- **OFF**  
Hide the ID address of the selected PTZ Camera.

### 3.3.10 TITLE DISPLAY

The user can name a certain view area and display its title for easy recognition. In this option, the user can choose whether or not to display the titles set in advance.

- **ON**  
A title set for a certain view will be displayed when the PTZ Camera returns to that view area.
- **OFF**  
If TITLE DISPLAY is set to <OFF>, no title will be displayed on the screen even if titles have been set.

### 3.3.11 TITLE SETTING

Up to 16 zone titles can be set with maximum 20 characters for each title.

Follow the steps below to set a camera title.

STEP 1: Operate the camera to a view area where you want to set a title for it.

STEP 2: Turn on the OSD and go to the **MAIN PAGE 2** to select <TITLE SETTING>.

STEP 3: Select a number to represent the view area.

STEP 4: Press <ENTER> to go into the editing page.

TITLE SETTING: 01										
0	1	2	3	4	5	6	7	8	9	EXIT
A	B	C	D	E	F	G	H	I	J	SAVE
K	L	M	N	O	P	Q	R	S	T	LEFT
U	V	W	X	Y	Z	:	/	.	,	RIGHT
[	]	+	?	-						DELETE
TITLE:										
ABC										

STEP 5: Choose a character with direction keys and then press <ENTER> to input.

For example: <A> <ENTER>, <B> <ENTER>, <C> <ENTER>

TITLE: ABC

STEP 6: To delete input characters, move the cursor to <LEFT> or <RIGHT> and press <ENTER> to select a character in the entry field. Then move the cursor to <DELETE> and press <ENTER> to delete the selected character.

STEP 7: When the setting is completed, move the cursor to <SAVE> and press <ENTER> to save.

After completing title setting, go back to the **MAIN PAGE 2** to carry on setup of preset points.

MAIN PAGE 2	
ID DISPLAY	ON
TITLE DISPLAY	OFF
TITLE SETTING	01
PRESET	ENTER
SEQUENCE	ENTER
AUTOPAN	ENTER
CRUISE	ENTER
HOME SETTING	ENTER

### 3.3.12

#### PRESET

- **PRESET SET**

Totally 256 preset points can be set. Follow the steps below when in the preset setting menu.

STEP 1: Press the right/left key on the keyboard to select a number (1 represents preset point 1, 2 represents preset point 2, etc.)

STEP 2: Press <ENTER> and then move the PTZ Camera to a targeted shooting area/point.

STEP 3: Press <ENTER> again to save the defined preset point.

Once completing setup of a preset point, users could move the cursor to the next item to run the preset point.

- **PRESET RUN**

Press <ENTER>, and the camera will go to the appointed point. To run other defined preset point, simply press the LEFT/RIGHT key on the keyboard, select the preset point that you want to go, and press the <ENTER> key again.

- **EXIT**

Exit the PRESET menu and go back to the **MAIN PAGE 2** to carry on setup of sequence.

MAIN PAGE 2	
ID DISPLAY	ON
TITLE DISPLAY	OFF
TITLE SETTING	01
PRESET	ENTER
SEQUENCE	ENTER
AUTOPAN	ENTER
CRUISE	ENTER
HOME SETTING	ENTER



**NOTE:** Users could set preset points through the control keyboard. Please refer to its manual for further information.

### 3.3.13

## SEQUENCE

This function carries out pre-positioning of the pan, tilt, zoom and focus features in a certain sequence for a camera. Before setting up this function, the user must set at least two preset points.

SEQUENCE	
SEQUENCE LINE	1
SEQUENCE POINT	01
PRESET POSITION	001
SPEED	01
DWELL TIME	001
RUN SEQUENCE	ENTER
EXIT	YES

- **SEQUENCE LINE**

The PTZ Camera has eight built-in sets of sequence lines. First use the LEFT/RIGHT direction keys to select a line and then set the associated sequence points.

- **SEQUENCE POINT**

Up to 64 points can be specified for each sequence line. The sequence points represent the order of the preset points that the PTZ Camera will automatically run. The following setup items, including PRESET POSITION, SPEED and DWELL TIME, will influence how the camera runs through each sequence point.

- **PRESET POSITION**

Users can assign a specific preset position to the selected Sequence Point with this item. Options include "1~255" and "END." END is used for the

Sequence Point following the last Sequence Point when the amount of sequence points (see the previous section) is less than 64 points.



**NOTE:** If not all 64 points are used, please set the point following the last Sequence Point as “END” (PRESET POSITION) so that the sequence line can work properly. For example, if a user intends to set a Sequence Line with 5 sequence points. It is required to set the PRESET POSITION of Sequence Point 06 as “END.”

- **SPEED**

Users can set the pan/tilt speed of the PTZ Camera from one sequence point to the next one, and the range of setup speed is from 1 to 15. Within the range, PAN speed varies from 10 ~ 400 (degree/sec.), and TILT speed varies from 8 ~ 400 (degree/sec.).

- **DWELL TIME**

The DWELL TIME is the duration time that the PTZ Camera will stay at a sequence point, and the range is from <0> to <127> seconds. The PTZ Camera will go to the next sequence point when the DWELL TIME expires. If the setting is <0>, the PTZ Camera will stay at the sequence point for less than 1 second and then shift to the next point.

- **RUN SEQUENCE**

The user can command the PTZ Camera to run the selected sequence line manually. Press <ENTER> to execute a sequence line.

- **EXIT**

Select this option to exit the SEQUENCE menu; go back to the **MAIN PAGE 2** to carry on setup of auto-pan.

MAIN PAGE 2	
ID DISPLAY	ON
TITLE DISPLAY	OFF
TITLE SETTING	01
PRESET	ENTER
SEQUENCE	ENTER
AUTOPAN	ENTER
CRUISE	ENTER
HOME SETTING	ENTER



**NOTE:** Users could execute the sequence function through the control keyboard. Please refer to its user manual for further information.

## 3.3.14

**AUTOPAN**

Auto-pan means motion of scanning an area horizontally so that the PTZ Camera can catch horizontal view. The parameters are listed as follows.

AUTOPAN	
AUTOPAN LINE	1
START POINT	TO FIND
END POINT	TO FIND
DIRECTION	RIGHT
SPEED	1
RUN AUTOPAN	ENTER
EXIT	YES

- **AUTOPAN LINE**

There are four sets of auto-pan line built in a PTZ Camera. Users can choose a line to execute using LEFT/RIGHT direction keys. In addition, users are able to command the camera to do endless panning by setting the start point the same as the end point.

- **START POINT**

Follow the description to set the start position of the AUTOPAN path.

1. Move the cursor to <START POINT> and press <ENTER> while <TO FIND> is flashing. Then the item will turn <TO SAVE> automatically.
2. Move the PTZ Camera to the desired position and press <ENTER> to save the position as the start point; the cursor will move to <END POINT> automatically. Set the end point to complete the auto-pan setting.




**NOTE:** The tilt and zoom values of the start point will be recorded and fixed for the selected auto-pan line.

- **END POINT**

The user can set the end point once the start point has been defined. Pan the PTZ Camera to another position and press <ENTER> to save the position as the end point.

- **DIRECTION**

This option is used to set the AUTOPAN direction of the PTZ Camera. If you select <RIGHT>, the camera will start to pan clockwise from the start point to the end point and then return to the start point. If you select <LEFT>, the camera will start to pan anticlockwise from the start point to the end point. Refer to the diagram below.

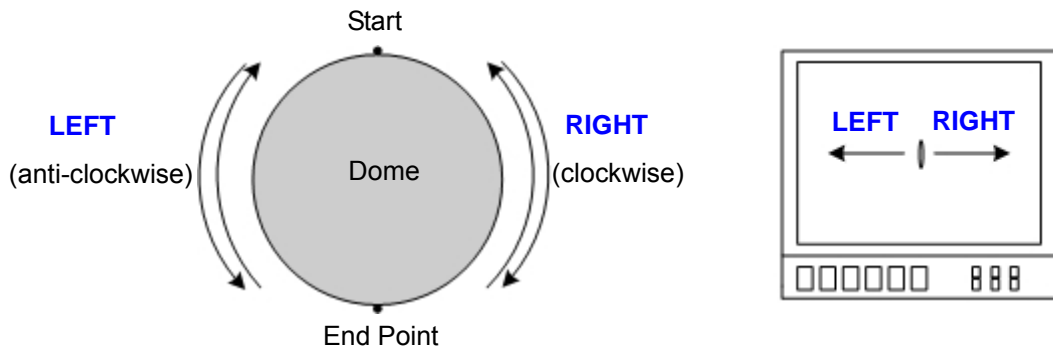

- **SPEED**

This option is for defining the PTZ Camera rotation speed while running auto-pan. The speed is adjustable from 1 to 4 (10 ~ 45 degree/sec.).

- **RUN AUTOPAN**

After all setting related to auto-pan are completed, select this item to execute the auto-pan function. Press the <ENTER> to run an auto-pan path.

- **EXIT**

Exit the AUTOPAN setup menu; go back to the **MAIN PAGE 2** to carry on setup of cruise.

MAIN PAGE 2	
ID DISPLAY	ON
TITLE DISPLAY	OFF
TITLE SETTING	01
PRESET	ENTER
SEQUENCE	ENTER
AUTOPAN	ENTER
CRUISE	ENTER
HOME SETTING	ENTER



**NOTE:** Users could execute the auto-pan function through the control keyboard. Please refer to its user manual for further information.

## 3.3.15

**CRUISE**

CRUISE is a route formed with manual operation, through adjusting pan, tilt position and zoom parameters, which can be stored and recalled to execute repeatedly.

CRUISE	
CRUISE LINE	1
RECORD START	ENTER
RECORD END	ENTER
RUN CRUISE	ENTER
EXIT	YES

- **CRUISE LINE**

There are eight sets of Cruise line built in a PTZ Camera. Using LEFT/RIGHT direction keys to select a line first and then follow the steps below to start recording the cruise path.

- **RECORD START**

Follow the description to record the CRUISE path.

1. Rotate the PTZ Camera to the desired view area (for some protocols, users may need to do it before entering the OSD), and press <ENTER> to create the cruise path using the joystick on the control unit. The percentage of the memory buffer used will be displayed on the screen.
2. Pan, tilt and zoom the PTZ Camera to create a path.



**NOTE:** Pay attention to the memory size when building a cruise path. Once the buffer percentage reaches 100%, recording of the path will stop.

- **RECORD END**

The cursor will be moved to RECORD END while you are creating the cruise line; when the setting is complete, press <ENTER> to save the path.

- **RUN CRUISE**

Once the setting is complete, press the <ENTER > to run the defined cruise.

- **EXIT**

Exit the CRUISE menu; go back to the **MAIN PAGE 2** to carry on setup of Home Setting.

MAIN PAGE 2	
ID DISPLAY	ON
TITLE DISPLAY	OFF
TITLE SETTING	01
PRESET	ENTER
SEQUENCE	ENTER
AUTOPAN	ENTER
CRUISE	ENTER
HOME SETTING	ENTER



**NOTE:** Users could execute the cruise function through the control keyboard. Please refer to its user manual for further information.

### 3.3.16 HOME SETTING

The user can set an operating mode to ensure constant monitoring. If the PTZ Camera is idle for a period of time, the selected function will be activated automatically; this is the HOME function. The HOME function allows continuous and accurate monitoring and prevents the PTZ Camera from stopping or missing events.

HOME SETTING	
HOME FUNCTION	OFF
SELECT MODE	PRESET
PRESET POINT	001
RETURN TIME	001 MIN.
GO	ENTER
EXIT	YES

- **HOME FUNCTION**

The item is used to enable or disable the HOME function. Use the left/right direction keys of the control keyboard to change the setting.

- **SELECT MODE**

Select one of the modes that the PTZ Camera should execute when the HOME function is enabled and the RETURN TIME expires. The options include <AUTOPAN>, <SEQUENCE>, <CRUISE> and <PRESET>. Use the left/right direction keys of the control keyboard to change the setting, and the items below will change in cooperating with your selection.

- **PRESET POINT**

Select a preset point where the PTZ Camera should go after the Return Time function, which will be mentioned later, is activated. The preset point(s) should be set prior either in the PRESET setup menu or through the keyboard.

**SEQUENCE LINE**

Select a sequence line that the PTZ Camera should execute after the Return Time function is activated. The sequence line(s) should be defined prior either in the SEQUENCE setup menu or through the keyboard.

**AUTOPAN LINE**

Select an auto-pan line that the PTZ Camera should execute after the Return Time function is activated. The auto-pan line(s) should be defined prior either in the AUTOPAN setup menu or through the keyboard

**CRUISE LINE**

Select a cruise line that the PTZ Camera should execute after the Return Time function is activated. The cruise lines should be defined prior either in the CRUISE setup menu or through the keyboard.

- **RETURN TIME**

The camera starts to count down RETURN TIME when the dome idles, and then execute the SELECT MODE function when the return time is up. The RETURN TIME ranges from 1 to 128 minutes.

- **GO**

If the HOME function is enabled, the user can execute the HOME function by selecting this option.

- **EXIT**

Exit the HOME SETTING menu. Then go to the **MAIN PAGE 3** to carry on other setups.

**18x/23x/26x/35x Model:**

MAIN PAGE 3	
IR FUNCTION	AUTO
ALARM SETTING	ENTER
ALARM DETECT	OFF
WDR FUNCTION	OFF
PRIVACY MASK	ENTER
TIME SETTING	ENTER
SCHEDULE	ENTER
EXIT OSD	YES

### 3.3.17 IR FUNCTION (Removable IR Blocking)

The IR blocking filter enables the PTZ Camera to capture a clear image at night time or in low light conditions. During the day, the IR blocking filter is fitted to block the infrared light and ensure a clear image; at night, the IR blocking filter is removed to catch the available infrared rays to view images in black and white. In 23× and 35× models, the user can view colour images when the IR function is activated. Refer to the description below to operate the IR function.

#### 18×/26× Model :

- **AUTO**

The Internal circuit will automatically decide the occasion to remove the IR cut filter according to the value of light condition calculated by the internal light algorithm.

- **MANUAL**

#### IR MANUAL ON

Select the item to remove the IR blocking filter; the camera will be in B/W (Night) mode.

#### IR MANUAL OFF

Select the item to attach the IR blocking filter; the camera will be in Color (Day) mode.

#### 23×/35× Model:

Select one of the IR modes below through the right key on the control keyboard. Press <ENTER> on the selected mode to enter its submenu, which will be described later.

- **AUTO**

The Internal circuit will automatically decide the occasion to remove the IR blocking filter according to the image brightness level.



**NOTE:** When IR function is in AUTO mode, AE will automatically become AUTO mode. Additionally, if AE is set as Shutter, Iris and AGC priority mode, the IR AUTO function will be invalid. To resume IR AUTO function in this case, users can 1) adjust AE to AUTO mode; 2) adjust IR function to ON/OFF mode, and then switch back to AUTO mode.

- **ON**

Select the item to remove the IR blocking filter.

- **OFF**  
Select the item to disable IR function.



**NOTE:** When Alarm Detect function (see section [3.3.19 ALARM DETECT](#)) is turned on, IR function will automatically switch to ON/OFF mode.

### **Sub-menu of IR Function:**

IR FUNCTION	
THRESHOLD	LOW
IR COLOR	COLOR
EXIT + SAVE	YES

### **THRESHOLD**

The PTZ Camera will remove the filter immediately when the threshold value is reached. For the 23× model, the threshold options are <LOW>, <MID> and <HI>. <LOW> threshold indicates a higher sensitivity and can improve reliability of lens so that it is easier to switch to Day mode and relatively difficult to change into Night mode; while <HI> indicates that it is easier to switch to Night mode and difficult to change into Day mode. For the 35× Model, the IR threshold value ranges from <1> ~ <13>. At value <1>, the camera will be most inclined to convert to color mode from B/W mode, while at value <13>, the camera comparatively tends to stay in B/W mode.

### **IR COLOR**

When the IR blocking filter is removed, the video output can be programmed as color or B/W (black and white). The color here refers to simulated color, not real color. This function is only applicable in IR ON mode.

### **Exit**

Exit the IR function menu and go back to the **MAIN PAGE 3** to carry on setup of alarm setting.

MAIN PAGE 3	
IR FUNCTION	AUTO
ALARM SETTING	ENTER
ALARM DETECT	OFF
WDR FUNCTION	OFF
PRIVACY MASK	ENTER
TIME SETTING	ENTER
SCHEDULE	ENTER
EXIT OSD	YES

### 3.3.18 ALARM SETTING

The PTZ Camera provides eight alarm inputs and one alarm output (N.O. or N.C) to connect alarm devices. This function enables the PTZ Camera to work in conjunction with an alarm system to capture images of a particular event. For wiring details, please refer to the installation guide and/or qualified service personnel. Adjustable alarm parameters are listed below.

ALARM SETTING	
ALARM PIN	1
ALARM SWITCH	OFF
ALARM TYPE	N.C.
ALARM ACTION	PRESET
PRESET POINT	001
DWELL TIME	ALWAYS
EXIT	YES

- **ALARM PIN**

The PTZ Camera provides eight alarm inputs and one output (N.O. or N.C). Select an alarm connection for which you want to use this option to set alarm-related parameters and then set those parameters in the Alarm Setting menu. For alarm pin definitions, refer to section [2.6 22-Pin Connector Definition](#) or the installation guide.




**NOTE:** If two or more alarm pins are triggered at the same time, smaller alarm pin number will have higher priority of being handled. For example, if Alarm-1 and Alarm-3 are triggered simultaneously, only Alarm-1 will actually be handled.

- **ALARM SWITCH**

This option is used to enable or disable the selected alarm pin function. Use the left/right direction keys on the control keyboard to change the setting.

- **ALARM TYPE**

There are two alarm types: Normal open and Normal close, which are illustrated below. Select an alarm type that corresponds to the alarm application.

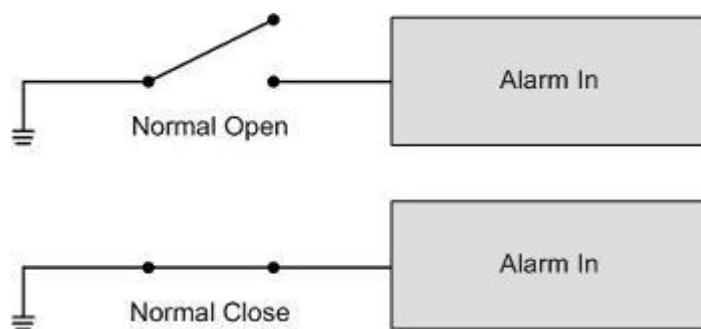

- **ALARM ACTION**

The alarm actions include PRESET, SEQUENCE, AUTOPAN and CRUISE functions. Select one of these modes so that certain action will be executed when an alarm is triggered. Use the right direction key of the control keyboard to select a particular action mode, and the items listed below will change in accordance with your selected alarm action. Additionally, when an alarm is triggered, there will be a flash warning notice: ALARM displayed in the upper right corner of the screen.

- **PRESET POINT**

Select a preset point where the camera should go when an alarm pin is triggered. The preset point(s) should be set prior either in the PRESET setup menu or through the keyboard.

#### **SEQUENCE LINE**

Select a sequence line that the PTZ Camera should execute when an alarm pin is triggered. The sequence line(s) should be defined prior either in the SEQUENCE setup menu or through the keyboard.

#### **AUTOPAN LINE**

Select an auto-pan line that the camera should execute when an alarm pin is triggered. The auto-pan line(s) should be defined prior either in the AUTOPAN setup menu or through the keyboard.

#### **CRUISE LINE**

Select a cruise line that the camera should execute when an alarm pin is triggered. The cruise line(s) should be defined prior either in the CRUISE setup menu or through the keyboard.

- **DWELL TIME**

The DWELL TIME is duration of executing an alarm action. If the PRESET mode is selected, the PTZ Camera will go to the selected preset position and stay there for a user-defined period of time (1~127 seconds/Always) when

alarm takes place. If other modes (SEQUENCE/AUTOPAN/CRUISE) have been selected, the camera will keep executing the selected mode (DWELL TIME: ALWAYS) until alarm condition is released or users rotate the joystick to change the status of the PTZ Camera.



**NOTE:** The dwell time is only adjustable when selecting **Preset** as the alarm action. When the dwell time is up, the PTZ Camera will go back to its trigger position and recheck alarm pin status.

- **EXIT**

Exit the ALARM SETTING menu and go back to the **MAIN PAGE 3** to carry on setup of Alarm Detect (18×/23×/26×/35× model only).

MAIN PAGE 3	
IR FUNCTION	AUTO
ALARM SETTING	ENTER
ALARM DETECT	OFF
WDR FUNCTION	OFF
PRIVACY MASK	ENTER
TIME SETTING	ENTER
SCHEDULE	ENTER
EXIT OSD	YES

### 3.3.19 ALARM DETECT

When the alarm detect function is activated, the camera will detect movement within a monitoring area and then send an alarm signal automatically. There will be a flash warning notice: MOTION displayed in the upper left corner of the screen.

#### 18x/26x Model:

ALARM DETECT	
DETECT SWITCH	OFF
DETECT MODE	NONE
BLOCK MODE	NONE
FRAME SET	NONE
FRAME DISABLE	NONE
THRESHOLD	NONE
EXIT	YES

- **DETECT SWITCH**

The item is used to enable or disable the ALARM DETECT function.

- **DETECT MODE**

Four alarm detect modes are provided for different application.

#### **INT FOCUS (Internal Focus)**

The alarm will be triggered if the internal focus changes; if the focus returns to the original position, the alarm will stop.

#### **FIX FOCUS**

If focus movement is detected, the alarm will be triggered, and the alarm stops when focus returns to the original position. If the detected focus movement keeps changing for more than four seconds, the new focus position will be memorized as the reference, and the alarm will stop.



**NOTE:** The INT FOCUS and FIX FOCUS detect modes will be activated only with the Auto Focus mode.

#### **INT AE (Internal AE)**

When Auto Exposure (AE) movement is detected, the alarm will be triggered; if the Exposure Level returns to the original level, the alarm will stop.

#### **FIX AE**

The alarm will be triggered if the Exposure value changes; if the adjusted AE value retains for four seconds, the value will be saved as the reference, and the alarm will stop.

**MOTION**

Motion Detection function allows detecting suspicious motion and triggering alarms when motion volume in the detected area reaches/exceeds the determined sensitivity threshold value. The main menu is shown below:

ALARM DETECT	
DETECT SWITCH	OFF
DETECT MODE	MOTION
BLOCK MODE	ON
FRAME SET	01
FRAME DISABLE	01
THRESHOLD	016
EXIT	YES

- **BLOCK MODE**

In Motion Detect Mode, users can set Block Mode as “ON” or “OFF”. When BLOCK MODE is turned on, if there are any variations (e.g. caused by intrusion) in the sections of the monitoring image, the affected parts will be highlighted dynamically.

- **FRAME SET**

In a monitored field, users can define specific areas as motion detection target zones. Please refer to the instructions as follows to configure parameters for each motion detection zone so-called “Frame”. When motion is detected within a defined frame, a flash warning notice: MOTION, will display in the upper left corner of the screen.

Totally 4 frames can be set. Select a frame using the right/left keys on the keyboard, and press “ENTER” key to enter the frame’s submenu, as shown below.

FRAME SET 1	
LEFT LIMIT	L/R
TOP LIMIT	D/U
H SIZE	000
V SIZE	000
MODE	PRESET
PRESET POINT	001
DWELL TIME	001 SEC
EXIT	YES

**LEFT LIMIT**

Move the frame right/left using the right/left keys on the keyboard.

**TOP LIMIT**

Shift the frame up/down using the right/left keys on the keyboard.

**H/V SIZE**

Adjust the frame size via changing H/V size value using the right/left keys on the keyboard.

**MODE**

Assign a trigger action for a motion detection frame. Options include PRESET, SEQUENCE, AUTOPAN and CRUISE. When motion is detected within a frame, the PTZ Camera will execute the specific trigger action.

**DWELL TIME**

The DWELL TIME is duration of executing a trigger action. If select the PRESET mode, when motion is detected, the PTZ Camera will go to the selected preset position and stay there for a user-defined period of time (1~127 seconds/Always). If select other modes (SEQUENCE/AUTOPAN/CRUISE), the camera will keep executing the selected mode (DWELL TIME: ALWAYS) until it is interrupted by commands sent from a connected control device.

**EXIT**

Exit the FRAME setting page and go back to ALARM DETECT main page.

- **FRAME DISABLE**

Select a frame to be canceled, and press "ENTER." The selected frame will then be removed from the monitored field.

- **THRESHOLD**

The threshold range is adjustable from 1~255. The smaller the value, the more sensitive it is; i.e. 1: highest sensitivity; 255: lowest sensitivity.

- **EXIT**

Exit the ALARM DETECT menu and go back to the **MAIN PAGE 3** to carry on setup of WDR function (see [3.3.20 WDR FUNCTION](#)).

MAIN PAGE 3	
IR FUNCTION	AUTO
ALARM SETTING	ENTER
ALARM DETECT	OFF
WDR FUNCTION	OFF
PRIVACY MASK	ENTER
TIME SETTING	ENTER
SCHEDULE	ENTER
EXIT OSD	YES

**23x/35x Model:**

- **ON**

The camera will automatically execute motion detection within the monitoring area.



**NOTE:** For the 23x and 35x models, when Alarm Detect is turned on, the following functions will be affected: 1) AE becomes AUTO mode; 2) IR becomes ON/OFF mode; 3) Privacy Mask is turned OFF; 4) Digital Zoom is turned OFF; 5) No Auto Focus; 6) Digital Slow Shutter won't work. Additionally, if the PTZ Camera is controlled to execute motions (ex. Tilt and Pan) or functions (Preset, Sequence and Auto-pan) when Alarm Detect function is on, Alarm Detect will be disabled temporarily during that time. The function will be resumed in 3 to 5 seconds after all motions stop. Nevertheless, if the dwell time between preset positions of a Sequence line is set more than 5 seconds, Alarm Detect function will be activated after 5 seconds and will be turned off temporarily again when the camera starts to go to the next preset position.

- **OFF**

The item is used to disable Alarm Detect function.

### 3.3.20

#### **WDR FUNCTION (18x/26x/23x/35x Model)**

The Wide Dynamic Range (WDR) function is especially effective in solving indoor and outdoor contrast issues to enhance better image quality and video display. It enables the PTZ Camera to catch detailed data from the dark part (Indoor) without any saturation from the bright part (Outdoor).

**18x/26x Model:**

- **ON**

Activate the WDR function by selecting this option. In this mode, the Dome Camera will operate the WDR function automatically.

- **OFF**

Deactivate the WDR function.

**23x/35x Model:**

- **AUTO**

In this mode, the PTZ Camera will operate the WDR function automatically.

- **ON**

Under the item, users can define three parameters' value: RATIO LEVEL (000 ~ 128), SHUTTER SPEED (000 ~ 128) and IRIS OFFSET (000 ~ 128), as shown in the following column.

WDR MODE	
RATIO LEVEL	000
SHUTTER SPEED	000
IRIS OFFSET	000
EXIT	YES



**NOTE:** The parameter effects set here will be limited if Image Inverse is turned on.

- **OFF**

Select this option to disable the WDR function.

Exit the WDR FUNCTION menu and go back to the **MAIN PAGE 3** to carry on setup of privacy mask.

**18x/26x/23x/35x Model:**

MAIN PAGE 3	
IR FUNCTION	AUTO
ALARM SETTING	ENTER
ALARM DETECT	OFF
WDR FUNCTION	OFF
PRIVACY MASK	ENTER
TIME SETTING	ENTER
SCHEDULE	ENTER
EXIT OSD	YES



**NOTE:** For 23x and 35x models, when WDR function is at AUTO or ON mode, the following functions will be affected: 1) Backlight Compensation will be turned OFF; 2) Image Stabilizer will be turned OFF; 3) AE becomes AUTO mode; 4) Digital Slow Shutter has no function.

### 3.3.21 PRIVACY MASK

The Privacy Mask function aims to avoid any intrusive monitoring. Users can adjust the camera view position using the joystick, and adjust the mask size and area via the direction keys on the control keyboard. When setting a mask, it is suggested to set it at least *twice bigger* (height and width) than the masked object. The PTZ Camera will memorize the center of the selected view as an original point, so the joystick will be locked as users enter the SET MASK menu (mentioned later). Refer to the following description for setting privacy masks.



**NOTE:** The Image Flip function and the Image Inverse function will be disabled automatically while the Privacy Mask function is enabled.

#### **18x/26x Model:**

For these models, the available area for setting a privacy mask is restricted within tilt angle 70 degrees. Maximum 8 masks can be displayed in one scene. All the settings are described as the following:

PRIVACY MASK MENU	
PRIVACY SWITCH	OFF
TRANSPARENCY	OFF
COLOR	BLACK
SET MASK	01
CLEAR MASK	01
EXIT	YES

- **PRIVACY SWITCH**

Users can enable or disable the Privacy Mask function through this item. Set this item to <ON> before configuring mask zones.

- **TRANSPARENCY**

The color of privacy mask can be set as transparent. Select <ON> to display transparent masks.

- **COLOUR**

The color of privacy mask can be set through this item. The available colours are black, HI/LO gray (18x/26x models only), white, red, green, blue, cyan, yellow and magenta.

- **SET MASK**

Use the control device to move the PTZ Camera to the area in which you want to set a mask. Press <ENTER> to enter the **SET MASK** menu. The camera will memorize the present position as a privacy mask position. Up to 24 masks can be set for the 18x/26x models.

MASK01 MENU	
H CENTER	L/R
V CENTER	D/U
H SIZE	000
V SIZE	000
EXIT+SAVE	YES

### **H CENTER**

The original horizontal centre of the mask zone is the centre of the screen; it can be moved to another position by adjusting the horizontal value using the LEFT/RIGHT keys. The camera will pan right or left according to user's control.

### **V CENTRE**

The original vertical centre of the mask zone is the centre of the screen; it can be moved to another position by adjusting the vertical value using the LEFT/RIGHT keys. The camera will tilt up or down according to user's control.

### **H SIZE (00~80)**

Users can adjust the horizontal size of a privacy mask through this item. Set the H and V size to 0 can also delete the selected mask.

### **V SIZE (00~60)**

Users can adjust the vertical size of a privacy mask through this item. Set the H and V size to 0 can also delete the selected mask.

- **CLEAR MASK**

Users can delete a preset mask zone with this item. Please follow the steps listed below.

1. Select the mask zone that will be erased (e.g. 01).
2. Press <ENTER> to confirm the selection.

- **EXIT**

Exit the PRIVACY MASK page and go back to the **MAIN PAGE 3** to carry on setup of time related setting.

**18x/26x Model:**

MAIN PAGE 3	
IR FUNCTION	AUTO
ALARM SETTING	ENTER
ALARM DETECT	OFF
WDR FUNCTION	OFF
PRIVACY MASK	ENTER
TIME SETTING	ENTER
SCHEDULE	ENTER
EXIT OSD	YES

**23x/35x Model:**

For the 23x and 35x models, when Privacy Mask function is enabled, Alarm Detect function will automatically be disabled.

PRIVACY	
PRIVACY SWITCH	OFF
SHADE	BLACK
SET MASK	01
CLEAR MASK	01
MASK DISPLAY	FIRST
EXIT	YES

- **PRIVACY SWITCH**

This option is used to enable or disable the masking function. Set this item to <ON> before configuring mask zones.

- **SHADE**

The color of a privacy mask can be selected through this item. The available colours are black, gray and white.

- **SET MASK**

After pressing <ENTER> to enter the sub-menu of SET MASK, the camera will memorize the present position as a privacy mask position; up to 8 masks can be set. The model restricts the mask zones to be set too close with each other.



**NOTE:** For the 23x and 35x models, the available area for setting a privacy mask is restricted within tilt angle 45°, and two mask zones are allowed to set in a view area.

MASK01 MENU	
H CENTER	000
V CENTER	000
H SIZE	000
V SIZE	000
EXIT+SAVE	YES

**H CENTRE (000~255)**

The original centre of the mask zone is the centre of the screen. The user can move the centre of the mask zone to another position by pressing the LEFT/RIGHT keys on the keyboard to adjust the value.

**V CENTRE (000~255)**

The original centre of the mask zone is the centre of the screen. The user can move the centre of the mask zone to another position by pressing the LEFT/RIGHT keys on the keyboard to adjust the value.

**H SIZE (000~127)**

This option allows the user to adjust the horizontal size of the privacy mask. Setting the H and V size to 0 deletes the selected mask.

**V SIZE (000~127)**

This option allows the user to adjust the vertical size of the privacy mask. Setting the H and V size to 0 deletes the selected mask.



**NOTE:** A mask's size should be limited within the screen, whatever the optical zoom is.

- **CLEAR MASK**

Users can delete a preset mask zone with this item. Please follow the steps listed below.

1. Select the mask zone that will be erased (e.g. 01).
2. Press <ENTER> to confirm the selection. Consequently, the screen will display the instructions to reset after the mask is cleared.
3. Select <RESET> under the CLEAR MASK item and press <ENTER> to proceed with resetting.

- **MASK DISPLAY**

This item is used to set the time to display a privacy mask.

**FIRST**

If this mode is selected, the camera will detect the mask zone at the next preset position and display the mask in advance, and then pan the camera to the preset point.

**LAST**

If this mode is selected, the camera will move to the preset point first, and

then display the mask zone.

- **EXIT**

Exit the **PRIVACY MASK** page and go back to the **MAIN PAGE 3** to carry on setup of time related setting.

**23x/35x Model:**

MAIN PAGE 3	
IR FUNCTION	AUTO
ALARM SETTING	ENTER
ALARM DETECT	OFF
WDR FUNCTION	OFF
PRIVACY MASK	ENTER
TIME SETTING	ENTER
SCHEDULE	ENTER
EXIT OSD	YES

### 3.3.22 TIME SETTING

The time setting function is used to set the TIME related parameters of the integrated high speed dome. Each item in the menu is listed as follows.

TIME SETTING	
TIME DISPLAY	OFF
SET YEAR	05
SET MONTH	10
SET DAY	02
SET HOUR	12
SET MINUTE	12
EXIT+SAVF	YFS

- **TIME DISPLAY**

Select <ON> to display time information on the screen or <OFF> not to display.

- **YEAR / MONTH / DAY**

These options are for setting up the system date.

- **HOUR / MINUTE**

These options are for setting up the system time.

- **EXIT+SAVE**

Exit the TIME SETTING page and go back to the **MAIN PAGE 3** to carry on setup of schedule.

**18x/23x/26x/35x Model:**

MAIN PAGE 3	
IR FUNCTION	AUTO
ALARM SETTING	ENTER
ALARM DETECT	OFF
WDR FUNCTION	OFF
PRIVACY MASK	ENTER
TIME SETTING	ENTER
SCHEDULE	ENTER
EXIT OSD	YES

**3.3.23****SCHEDULE**

The schedule function enables users to program a preset point or function (Sequence/Auto-pan/Cruise) automatically to perform in a specific period of time.

SCHEDULE	
SCHEDULE SWITCH	ON
SCHEDULE POINT	01
SCHEDULE HOUR	11
SCHEDULE MINUTE	53
SCHEDULE MODE	PRESET
PRESET POINT	001
SCHEDULE RESET	YES
SCHEDULE EXIT	YFS

- **SCHEDULE SWITCH**

Select <ON> to enable or <OFF> to disable the schedule function.

- **SCHEDULE POINT**

Users are allowed to arrange 64 sets of schedule point, i.e. each set of schedule point can be assigned one kind of schedule modes.

- **SCHEDULE HOUR / MINUTE**

The items are for setting up the time to execute each schedule point.

- **SCHEDULE MODE**

This is for setting the schedule function of the selected schedule point; the options are listed as follows.

**NONE**

No action will be executed for the schedule if select the item.

**PRESET**

Users can select the PRESET mode as an action carried out in a schedule point.

### **SEQUENCE**

Users can select the SEQUENCE mode as an action carried out in a schedule point.

### **AUTOPAN**

Users can select the AUTOPAN mode as an action carried out in a schedule point.

### **CRUISE**

Users can select the CRUISE mode as an action carried out in a schedule point.

### **IR FUNC. (IR Function)**

If the IR function mode is selected, the AUTO IR FUNCTION will be activated for a schedule point.

- **SCHEDULE RESET**

Users can reset the whole schedule with the item.

- **SCHEDULE EXIT**

Exit the SCHEDULE menu and go back to the MAIN PAGE 3.

### **3.3.24 EXIT OSD**

To exit the OSD setup menu, the user can either select this item on the bottom of **MAIN PAGE 3** or press the ESC button on the control keyboard.

## Appendix A: Technical Specifications

Items		18× Model	23× Model	26× Model	35× Model
<b>CAMERA</b>					
CCD Sensor		1/4" EXview	1/4" CCD	1/4" EXview	1/4" CCD
Progressive Scan		-	Yes	-	Yes
Optical Zoom		18×	23x	26×	35x
Digital Zoom		1× ~ 12× variable			
Effective Pixels	NTSC	380k			
	PAL	440k			
Horizontal Resolution		530 TVL	540 TVL	530 TVL	540 TVL
Scanning System		NTSC / PAL			
Synchronization		Internal / Line Lock			
Video Output		1.0 Vp-p / 75 Ω, BNC			
S/N Ratio		> 50 dB (AGC Off)			
Minimum Illumination		0.07 lux; 0.01 lux (B/W)	0.1 lux; 0.01 lux (B/W)	0.09 lux; 0.01 lux (B/W)	0.1 lux; 0.01 lux (B/W)
Focal Length		4.1~73.8 mm	3.6~82.8 mm	3.5~91 mm	3.4~119 mm
Focus Mode		Auto / Manual			
White Balance		Auto / Manual			
Iris Control		Auto / Manual			
Electronic Shutter	NTSC	1/1~1/10k sec.	1/2~1/30k sec.	1/1~1/10k sec.	1/1~1/30k sec.
	PAL	1/1~1/10k sec.	1/1.5~1/30k sec.	1/1~1/10k sec.	1/1~1/30k sec.
AGC control		Auto / Manual			
Back Light Compensation		On / Off			
<b>OPERATION</b>					
Built-in Protocol		DynaColor, Pelco D&P, VCL, Philips, AD-422, JVC, Kalatel, etc.			
Multi-Language OSD		English, French, German, Italian, Japanese, Polish, Portuguese, Russian, Spanish, Turkish, Simplified Chinese, Traditional Chinese			
Pan Travel		360° endless			
Tilt Travel		-10° ~ 190°			
Manual Speed		0.5° ~ 90°/s			
Presets		256			
Preset Accuracy		0.225°			
Preset Speed		5° ~ 400°/s			
Sequence		8			
Auto Pan		4			
Cruise		8			
Privacy Mask		24	8	24	8
Proportional Pan & Tilt		On / Off (Pan and tilt speed proportional to zoom ratio)			

Items	18x Model	23x Model	26x Model	35x Model
Resume after Power loss	Yes			
Zone Title	16			
Home Function	Preset, Sequence, Auto pan, Cruise			
Auto Flip	Digital / Mechanical / Off			
Digital Slow Shutter	On / Off	On / Off	On / Off	On / Off
Electronic Image Stabilizer	-	-	-	On / Off
Motion Detection	On / Off	On / Off	On / Off	On / Off
Wide Dynamic Range	On / Off	On / Off	On / Off	On / Off
Day/Night: IR Cut Filter	On / Off	On / Off	On / Off	On / Off
Image Inverse	On / Off	On / Off	On / Off	On / Off
Image Freeze	On / Off	On / Off	On / Off	On / Off
Digital Noise Reduction	-	-	-	On / Off
Alarm Input	8			
Alarm Output	1			
Alarm Reaction	Preset, Sequence, Auto pan, Cruise			
<b>GENERAL</b>				
Environment	Indoor / Outdoor			
Controller Interface	RS-485			
Operating Temperature	Indoor	0°C ~ 40°C (32°F ~ 104°F)		
	Outdoor	-50°C ~ 50°C (-58°F ~ 122°F)		
Waterproof Standard	IP66 standard			
Dimension	Indoor	Ø131 x 226 mm (5.2 x 8.9 Inches)		
	Outdoor	Ø 172 x 302.5 mm (6.7 x 11.9 Inches) / Ø 190 x 302.5 mm ( 7.5x 11.9 Inches), with sunshield		
Weight	Indoor	1.6 kg (3.5 lbs)		
	Outdoor	2.6 kg (5.7 lbs)		
Power Source	AC 24V ± 10%			
Power	Indoor	20 W		
Consumption	Outdoor	65 W (with Heater)		
Regulatory	CE, FCC, RoHS			

\* Specifications are subject to change without notice.

## OSD Menu Notes

The following OSD menu tables are provided for users to record various PTZ Camera setting.

### <18x/26x Model>

Item	Layer 1	Layer 2	Layer 3	Notes	
<b>LANGUAGE</b>	<ENGLISH>, <JAPANESE>, <PORTUGUESE>, <SPANISH>, <FRENCH>, <GERMAN>, <ITALIAN>, <POLISH>, <RUSSIAN>, <SIMPLIFIED CHINESE>, <TURKISH>				
<b>DEFAULT CAMERA</b>	<ON>, <OFF>				
<b>BACKLIGHT</b>	<ON>, <OFF>				
<b>FOCUS</b>	AUTO	AF MODE <NORMAL>, <INTERVAL>, <ZOOM TRIG> EXIT + SAVE: YES			
	MANUAL	FOCUS SPEED <01>~<08> EXIT + SAVE: YES			
<b>AE MODE</b>	EXPOSURE COMP.	<OFF>, EXPOSURE VALUE: <-10.5dB> ~ <10.5dB> EXIT + SAVE: YES			
		AUTO	EXIT + SAVE: YES		
	AE MODE	BRIGHT	BRIGHT VALUE <00> ~ <31> EXIT + SAVE: YES		
		SHUTTER	SHUTTER SPEED <1/10000>~<1> SEC. EXIT + SAVE: YES		
	AE MODE	IRIS	IRIS VALUE <CLOSE>, <F1.6> ~ <F28> EXIT + SAVE: YES		
			MANUAL	BRIGHT VALUE: AUTO	
		SHUTTER SPEED <1/10000> ~ <1>			
		IRIS VALUE <F1.6> ~ <F28> GAIN VALUE <-3>dB ~ <28>dB EXIT + SAVE: YES			
	EXIT + SAVE		YES		
	<b>WBC MODE</b>	AUTO (Auto White Balance)			
INDOOR					
OUTDOOR					
ATW (Auto-tracing WBC)					
MANUAL		R GAIN <000> ~ <127> B GAIN <000> ~ <127> EXIT + SAVE: YES			
<b>SETUP MENU 1</b>	ZOOM SPEED		<1> ~ <8>		
	DIGITAL ZOOM		<ON>, <OFF>		
	SLOW SHUTTER		<ON>, <OFF>		
	IMAGE INVERSE		<ON>, <OFF>		
	FREEZE		<ON>, <OFF>		
	APERTURE		<01> ~ <16>		
	EXIT		YES		
<b>SETUP MENU 2</b>	FLIP	<OFF>, <M.E.>, <IMAGE> EXIT + SET: YES			
		MIN ANGLE <-10 ~ +10 DEG> MAX ANGLE <080 ~ 100 DEG> EXIT + SET: YES			
	SPEED BY ZOOM		<ON>, <OFF>		
	AUTO CALI.		<ON>, <OFF>		
	SYSTEM RESET		YES		
	EXIT		YES		

Item	Layer 1	Layer 2	Layer 3	Notes
<b>ID DISPLAY</b>	<ON>, <OFF>			
<b>TITLE DISPLAY</b>	<ON>, <OFF>			
<b>TITLE SETTING</b>	<01> ~ <16>			
<b>PRESET</b>	PRESET SET	<001>~<256>		
	PRESET RUN	<001>~<256>		
	EXIT	YES		
<b>SEQUENCE</b>	SEQUENCE LINE	<1> ~ <8>		
	SEQUENCE POINT	<01> ~ <64>		
	PRESET POS.	<001> ~ <255>, <END>		
	SPEED	<01> ~ <15>		
	DWELL TIME	<000> ~ <127> SEC.		
	RUN SEQUENCE	ENTER		
	EXIT	YES		
<b>AUTOPAN</b>	AUTOPAN LINE	<1> ~ <4>		
	START POINT	<TO FIND>, <TO SAVE>		
	END POINT	<TO FIND>, <TO SAVE>		
	DIRECTION	<RIGHT>, <LEFT>		
	SPEED	<01> ~ <04>		
	RUN AUTOPAN	ENTER		
	EXIT	YES		
<b>CRUISE</b>	CRUISE LINE	<1> ~ <8>		
	RECORD START	ENTER		
	RECORD END	ENTER		
	RUN CRUISE	ENTER		
	EXIT	YES		
<b>HOME SETTING</b>	HOME FUNCTION	<ON>, <OFF>		
	SELECT MODE	<PRESET>, <SEQUENCE>, <AUTOPAN>, <CRUISE>		
	PRESET POINT	<001> ~ <256>		
	SEQUENCE LINE	<1> ~ <8>		
	AUTOPAN LINE	<1> ~ <4>		
	CRUISE LINE	<1> ~ <8>		
	RETURN TIME	<1> ~ <128> MIN.		
	GO	ENTER		
EXIT	YES			
<b>IR FUNCTION</b>	<AUTO>	THRESHOLD <01> ~ <29> EXIT + SAVE: YES		
	<MANUAL>	IR MANUAL: <ON>, <OFF> EXIT + SAVE: YES		
<b>ALARM SETTING</b>	ALARM PIN	<1> ~ <8>		
	ALARM SWITCH	<ON>, <OFF>		
	ALARM TYPE	<NO> (Normal Open), <NC> (Normal Close)		
	ALARM ACTION	<PRESET>, <SEQUENCE>, <AUTOPAN>, <CRUISE>		
	PRESET POINT	<001> ~ <256>		
	SEQUENCE LINE	<1> ~ <8>		
	AUTOPAN LINE	<1> ~ <4>		
	CRUISE LINE	<1> ~ <8>		
	DWELL TIME	<001> ~ <127> Sec., <ALWAYS>		
EXIT	YES			
<b>ALARM DETECT</b>	DETECT SWITCH	<ON>, <OFF>		
	DETECT MODE	ON: <INT FOCUS>, <FIX FOCUS>, <FIX AE>, <MOTION>; OFF: NONE		
	BLOCK MODE	NONE; MOTION: <ON>, <OFF>		
	FRAME SET	NONE; MOTION: <01> ~ <04>		
	FRAME DISABLE	NONE; MOTION: <01> ~ <04>		
	THRESHOLD	NONE; MOTION: <001> ~ <255>		
	EXIT	YES		
<b>WDR FUNCTION</b>	<ON>, <OFF>			

Item	Layer 1	Layer 2	Layer 3	Notes	
PRIVACY MASK	PRIVACY SWITCH	<ON>, <OFF>			
	TRANSPARENCY	<ON>, <OFF>			
	COLOR	<BLACK>, <HI GRAY>, <LO GRAY>, <WHITE>, <RED>, <GREEN>, <BLUE>, <CYAN>, <YELLOW>, <MAGENTA>			
	SET MASK	<01> ~ <24>	H CENTER: L/R		
			V CENTER: D/U		
			H SIZE <000> ~ <080>		
			V SIZE <000> ~ <060>		
CLEAR MASK	<01> ~ <24>				
EXIT	YES				
TIME SETTING	TIME DISPLAY	<ON>, <OFF>			
	SET YEAR	<00> ~ <99>			
	SET MONTH	<01> ~ <12>			
	SET DAY	<00> ~ <31>			
	SET HOUR	<00> ~ <23>			
	SET MINUTE	<00> ~ <59>			
	EXIT+SAVE				
SCHEDULE	SWITCH	<ON>, <OFF>			
	POINT	<01> ~ <32>			
	HOUR	<00> ~ <23>			
	MINUTE	<00> ~ <59>			
	MODE	NONE	NO FUNCTION		
		PRESET	PRESET POINT <001> ~ <256>		
		SEQUENCE	SEQUENCE LINE <1> ~ <8>		
		AUTOPAN	AUTOPAN LINE <1> ~ <4>		
		CRUISE	CRUISE LINE <1> ~ <8>		
	IR FUNC.	IR FUNCTION <AUTO>, <ON>, <OFF>			
SCHEDULE RESET	YES				
EXIT	YES				
EXIT OSD	YES				

## 23x/35x Model&gt;

Item	Layer 1	Layer 2	Layer 3	Notes	
<b>LANGUAGE</b>	<ENGLISH>, <JAPANESE>, <PORTUGUESE>, <SPANISH>, <FRENCH>, <GERMAN>, <ITALIAN>, <POLISH>, <RUSSIAN>, <TRADITIONAL CHINESE>, <SIMPLIFIED CHINESE>, <TURKISH>				
<b>DEFAULT CAMERA</b>	<ON>, <OFF>				
<b>BACKLIGHT</b>	<ON>	BLC LEVEL <00> ~ <30> EXIT + SAVE: YES			
	<OFF>				
<b>FOCUS</b>	AUTO	TUNING VALUE <1.5M> (35x Model only), <1M>, <30CM>, <10CM>, <1CM> EXIT + SAVE: YES			
	MANUAL	FOCUS SPEED <0> ~ <3> EXIT + SAVE: YES			
<b>AE MODE</b>	AUTO	IRIS OFFSET <00> ~ <15> EXIT + SAVE: YES			
	SHUTTER	SHUTTER SPEED 23x Model: <1/30000> ~ <1/2> (NTSC); <1/30000> ~ <1/1.5> (PAL) 35x Model: <1/30000> ~ <1/1> (NTSC); <1/30000> ~ <1/1> (PAL) EXIT + SAVE: YES			
	IRIS	<00> ~ <09> EXIT + SAVE: YES			
	AGC	<00> ~ <05> EXIT + SAVE: YES			
<b>WBC MODE</b>	AUTO (Auto White Balance)				
	MANUAL	R GAIN <00> ~ <99> B GAIN <00> ~ <99> EXIT + SAVE: YES			
<b>SETUP MENU 1</b>	ZOOM SPEED	<FAST>, <SLOW>			
	DIGITAL ZOOM	<OFF>, <02> ~ <12>			
	SLOW SHUTTER (23x/35x Model)	23x Model: <1/2> ~ <1/60> (NTSC) 35x Model: <1/1> ~ <1/60> (NTSC) 23x Model: <1/1.5> ~ <1/50> (PAL) 35x Model: <1/1> ~ <1/50> (PAL)			
	D.N.R. (35x Model)	<OFF>, <01> ~ <04>			
	IMAGE INVERSE (23x/35x Model)	<ON>, <OFF>			
	FREEZE (23x/35x Model)	<ON>, <OFF>			
	APERTURE	<AUTO>	<MANUAL> H APERTURE <00> ~ <31> V APERTURE <00> ~ <31>		
	STABILIZER (35x Model Only)	<OFF>, <10Hz>, <5Hz>			
EXIT	YES				
<b>SETUP MENU 2</b>	FLIP	<OFF>, <M.E.>, <IMAGE>(23x/35x Model) EXIT + SET: YES			
	ANGLE ADJUSTER	MIN ANGLE <-10 ~ +10 DEG> MAX ANGLE <080 ~ 100 DEG> EXIT + SET: YES			
	SPEED BY ZOOM	<ON>, <OFF>			
	AUTO CALI.	<ON>, <OFF>			
	SYSTEM RESET	YES			
	EXIT	YES			
<b>ID DISPLAY</b>	<ON>, <OFF>				
<b>TITLE DISPLAY</b>	<ON>, <OFF>				
<b>TITLE SETTING</b>	<01> ~ <16>				

Item	Layer 1	Layer 2	Layer 3	Notes
<b>PRESET</b>	PRESET SET	<001>~<256>		
	PRESET RUN	<001>~<256>		
	EXIT	YES		
<b>SEQUENCE</b>	SEQUENCE LINE	<1> ~ <8>		
	SEQUENCE POINT	<01> ~ <64>		
	PRESET POS.	<001> ~ <255>, <END>		
	SPEED	<01> ~ <15>		
	DWELL TIME	<000> ~ <127> SEC.		
	RUN SEQUENCE	ENTER		
	EXIT	YES		
<b>AUTOPAN</b>	AUTOPAN LINE	<1> ~ <4>		
	START POINT	<TO FIND>, <TO SAVE>		
	END POINT	<TO FIND>, <TO SAVE>		
	DIRECTION	<RIGHT>, <LEFT>		
	SPEED	<01> ~ <04>		
	RUN AUTOPAN	ENTER		
	EXIT	YES		
<b>CRUISE</b>	CRUISE LINE	<1> ~ <8>		
	RECORD START	ENTER		
	RECORD END	ENTER		
	RUN CRUISE	ENTER		
	EXIT	YES		
<b>HOME SETTING</b>	HOME FUNCTION	<ON>, <OFF>		
	SELECT MODE	<PRESET>, <SEQUENCE>, <AUTOPAN>, <CRUISE>		
	PRESET POINT	<001> ~ <256>		
	SEQUENCE LINE	<1> ~ <8>		
	AUTOPAN LINE	<1> ~ <4>		
	CRUISE LINE	<1> ~ <8>		
	RETURN TIME	<1> ~ <128> MIN.		
	GO	ENTER		
EXIT	YES			
<b>IR FUNCTION</b> (23×/35× Model)	<AUTO>, <ON>, <OFF>	35× Model: THRESHOLD <01> ~ <13> 23× Model: THRESHOLD <MID>, <HI>, <LOW> IR COLOR <B/W>, <COLOR> EXIT + SAVE: YES		
<b>ALARM SETTING</b>	ALARM PIN	<1> ~ <8>		
	ALARM SWITCH	<ON>, <OFF>		
	ALARM TYPE	<NO> (Normal Open), <NC> (Normal Close)		
	ALARM ACTION	<PRESET>, <SEQUENCE>, <AUTOPAN>, <CRUISE>		
	PRESET POINT	<001> ~ <256>		
	SEQUENCE LINE	<1> ~ <8>		
	AUTOPAN LINE	<1> ~ <4>		
	CRUISE LINE	<1> ~ <8>		
	DWELL TIME	<001> ~ <127> Sec., <ALWAYS>		
EXIT	YES			
<b>ALARM DETECT</b> (23×/35× Model)	<ON>, <OFF>			
<b>WDR FUNCTION</b> (23×/35× Model)	<ON>	RATIO LEVEL <000> ~ <128> SHUTTER SPEED <000> ~ <128> IRIS OFFSET <000> ~ <128> EXIT <YES>		
	<AUTO>			
	<OFF>			
<b>PRIVACY MASK</b> (23×/35× Model)	PRIVACY SWITCH	<ON>, <OFF>		
	MASK SHADE	<GRAY>, <WHITE>, <BLACK>		
	SET MASK	<01> ~ <08>	H CENTER <000> ~ <255>	

Item	Layer 1	Layer 2	Layer 3	Notes	
			V CENTER<000> ~ <255>		
			H SIZE <000> ~ <127>		
			V SIZE <000> ~ <127>		
			EXIT + SAVE		
	CLEAR MASK	<01> ~ <08>, <RESET>			
MASK DISPLAY	<FIRST>, <LAST>				
EXIT	YES				
<b>TIME SETTING</b>	TIME DISPLAY	<ON>, <OFF>			
	SET YEAR	<00> ~ <99>			
	SET MONTH	<01> ~ <12>			
	SET DAY	<00> ~ <31>			
	SET HOUR	<00> ~ <23>			
	SET MINUTE	<00> ~ <59>			
	EXIT+SAVE				
<b>SCHEDULE</b>	SWITCH	<ON>, <OFF>			
	POINT	<01> ~ <32>			
	HOUR	<00> ~ <23>			
	MINUTE	<00> ~ <59>			
	MODE	NONE		NO FUNCTION	
		PRESET		PRESET POINT <001> ~ <256>	
		SEQUENCE		SEQUENCE LINE <1> ~ <8>	
		AUTOPAN		AUTOPAN LINE <1> ~ <4>	
		CRUISE		CRUISE LINE <1> ~ <8>	
		IR FUNC.		IR FUNCTION <AUTO>, <ON>, <OFF>	
	SCHEDULE RESET	YES			
EXIT	YES				
<b>EXIT OSD</b>	YES				



CBC Co.,Ltd.

Tokyo, Japan

[www.GANZ.jp](http://www.GANZ.jp)